
# Welker® Injection **Probe** Model IP-1CV



### Installation, Operation, and Maintenance Manual

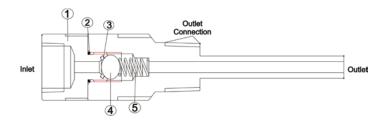

Part No.	Description
1	<b>Upper Housing</b>
2	O-Ring
3	O-Ring
4	Ceramic Ball
5	Spring

## 1.3 Maintenance

## N NOTE

We recommend that the unit have annual maintenance. In some cases, a more frequent schedule may be appropriate. All maintenance should be done on a clean surface.

- Turn off the injection pump. 1.3.1
- 1.3.2 Depressurize the pipeline.
- Disconnect the pump from the probe's inlet 1.3.3
- 1.3.4 Remove the probe from the pipeline.
- 1.3.5 Unscrew the upper housing (Part 1).
- 1.3.6 Replace the two O-rings (Part 2 and Part 3) on the upper housing.
- 1.3.7 Remove and clean the ball (Part 4) and spring (Part 5). Inspect the ball and spring for scratches. Replace if scratches are present.
- 1.3.8 Reinsert the spring and the ball.
- 1.3.9 Screw the upper housing back onto the probe.
- Maintenance is now complete. Refer to 1.3.10 Section 1.2 for installation.

## 1.1 Product description

The Welker Injection Probe is designed to allow product to be injected through a check valve and into the appropriate outlet. The device has a check valve to limit flow to the outlet only.

## **Specifications**

Materials of Ceramic, 316 SS, Viton Construction

 $\frac{1}{2}$ " MNPT (others available) **Outlet Connection** 

 $\frac{1}{2}$ " FNPT (others available) Inlet Connection

Maximum Allowable 2,160 PSI @ -20° F to 100° F Pressure (145 bar @ -28° C to 37° C)



When sealing fittings with PTFE tape, refer to the proper sealing instructions for the tape used.

### 1.2 Installation instructions

- 1.2.1 Depressurize the pipeline to prepare for installation.
- Connect the injection probe into the pipeline. 1.2.2
- 1.2.3 Welker suggests installing an isolation valve in the inlet as a safety precaution. In case of check valve failure, the isolation valve can shut off flow.
- 1.2.4 Connect the output from your injection pump to the inlet of the probe. Installation is now complete.
- 1.2.5 Pressurize the pipeline.
- 1.2.6 Begin operation on the injection pump (refer to the appropriate pump manual).

**IOM-067** IP-1CV



13839 West Bellfort, Sugar Land, Texas 77498-1671 Phone: (281) 491-2331

Fax: (281) 491-8344 Toll Free: (800) 776-7267 Web Page: www.welkereng.com

© Copyright 2009, Welker, Inc.