

PRODUCT DESCRIPTION

- Designed to allow product flow in one direction only.
- The poppet inside the cartridge is spring-loaded to remain shut. Will only operate once the upstream or inlet pressure exceeds the tension on the spring—a physical state called “cracking pressure.”
- Liquid or gas shutoff is achieved when the upstream or inlet pressure falls below the downstream or outlet pressure and the Flexible Seal Seat™ inside the cartridge ensures a positive seal.

For inquiries regarding check valve calculations, please contact our Service Department: 281.207.1887

SPECIFICATIONS

Products

Gases and Liquids Compatible With the Materials of Construction

Materials of Construction

316/316L Stainless Steel, 303 Stainless Steel (Cartridge), PTFE, FKM (Others Available)

Maximum Allowable Inlet Pressure

3000 psig (206.8 barg)

Temperature Range

-4 °F to 120 °F (-20 °C to 48.8 °C)

Cracking Pressures

1–2 psig (0.06–0.13 barg)
10 psig (0.6 barg)

Connections

Inlet: ¼" FNPT

Outlet: ¼" MNPT or FNPT

Approximate Dimensions

1" x 1" x 2¾" (L x W x H)

Approximate Weight

0.4 lb

Maintenance Schedule

Every 12 Months
Severe Service, Dirty Conditions,
Excessive Usage: More Frequently

Options

CE Compliance
CRN Certification

The following procedures have been written for use with standard Welker® parts and equipment. Assemblies that have been modified might have additional requirements and specifications that are not listed in this document.

If you received a damaged CV-K Check Valve, please contact a Welker® representative immediately.

For all product inquiries, please contact our Service Department: 281.207.1887



INSTALLATION AND MAINTENANCE MANUAL WELKER® CV-K CHECK VALVE IOM-268 | REV. 0 | 02/11/2025



The installation, operation, and maintenance liability for this equipment becomes that of the purchaser at the time of receipt. Reading the instructions that comprise IOM-268 prior to installation and operation of this equipment is required for a full understanding of its application and performance prior to use.



When sealing fittings with PTFE tape, refer to the proper sealing instructions for the brand used.

CV-K: INSTALLATION

Installing the CV-K Check Valve

- Wrap the threads with PTFE tape.
- Install the CV-K Check Valve in the line where single-direction flow is desired.
- Install the inlet in the upstream direction (see Flowdirection in Figure 1).
- The CV-K is now installed and operational.

CV-K: MAINTENANCE

Before You Start

- Prior to maintenance or disassembly of the unit, it is advisable to have a repair kit available in case of unexpected wear or faulty seals.
- All maintenance and cleaning of the unit should be performed on a smooth, clean surface.
- Welker® recommends having an adjustable wrench and seal pick available for use during maintenance.



New seals supplied in spare parts kits should be lightly lubricated before being installed to ease the installation of the seals and reduce the risk of damage when positioning them on parts. Wipe excess lubricant from the seals, because it might adversely affect analytical results.



For sample-exposed seals, Welker® recommends non-hydrocarbon-based lubricants such as Krytox®. For non-sample-exposed seals, Welker® recommends lubricants such as Molykote® 111.



Make certain that the flow arrow on the cartridge (Figure 1) points in the direction of product flow. Incorrect installation of the cartridge will prevent the CV-K Check Valve from operating properly.

Maintaining the CV-K Check Valve

- Depressurize the line in which the CV-K Check Valve is installed.
- Disconnect the upstream and downstream connections.
- Unscrew the adapter cap from the adapter (Figure 1).
- Remove the cartridge along with the O-ring (Figure 1).
- Install a new O-ring to the replacement cartridge (Figure 1).
- Install the replacement cartridge to the adapter (Figure 1).
- Make certain that the flow arrow on the replacement cartridge (Figure 1) points in the direction of product flow. Incorrect installation of the cartridge will prevent the CV-K Check Valve from operating properly.
- Screw the adapter cap onto the adapter.
- Maintenance is now complete and the CV-K Check Valve can be reinstalled. See *Installation*, above, for instructions on installing the CV-K Check Valve and returning it to operation.

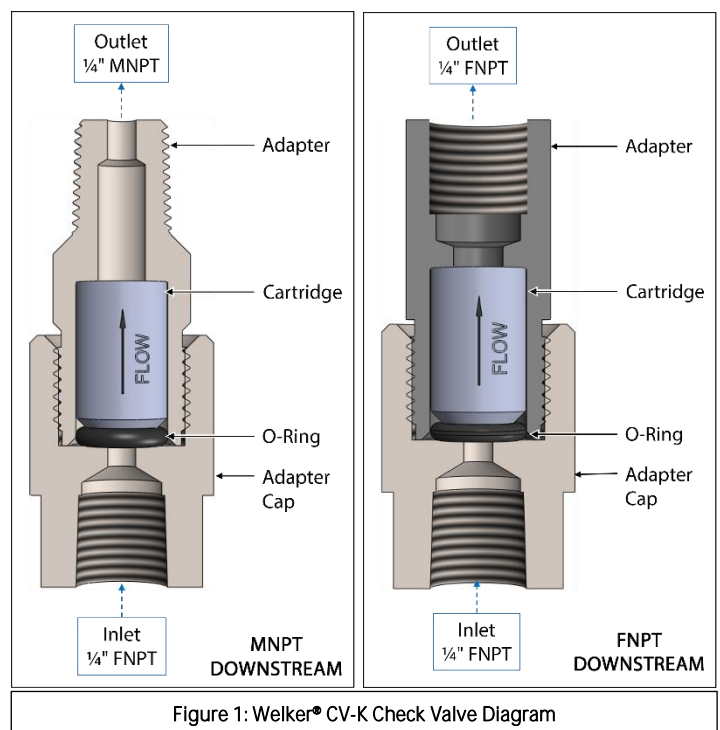


Figure 1: Welker® CV-K Check Valve Diagram


PRODUCT DESCRIPTION

- Designed to allow product flow in one direction only.
- The poppet inside the cartridge is spring-loaded to remain shut. Will only operate once the upstream or inlet pressure exceeds the tension on the spring—a physical state called “cracking pressure.”
- Liquid or gas shutoff is achieved when the upstream or inlet pressure falls below the downstream or outlet pressure and the Flexible Seal Seat™ inside the cartridge ensures a positive seal.

For inquiries regarding check valve calculations, please contact our Service Department: 281.207.1887

The installation, operation, and maintenance liability for this equipment becomes that of the purchaser at the time of receipt.

Reading the instructions that comprise IOM-268 prior to installation and operation of this equipment is required for a full understanding of its application and performance prior to use.

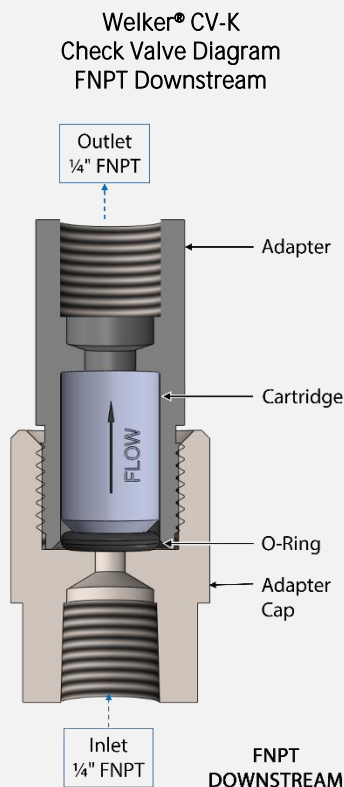

If you received a damaged CV-K Check Valve, please contact a Welker® representative immediately.

For all product inquiries, please contact our Service Department: 281.207.1887



IMPORTANT SAFETY INSTRUCTIONS

WELKER® CV-K CHECK VALVE

IOM-268 | REV. 0 | 02/11/2025

BEFORE YOU BEGIN

Read These Instructions Completely and Carefully



NOTES emphasize information and/or provide additional information to assist the user.



CAUTION messages appear before procedures that could result in damage to equipment if not observed.



WARNING messages appear before procedures that could result in personal injury if not observed.

The instructions that comprise IOM-268 are intended to be used as basic setup and installation guidelines for the Welker® Check Valve, Model CV-K. The information in IOM-268 has been carefully checked for accuracy and is intended to be used as guidelines for the setup and installation of the Welker® equipment described in IOM-268. Correct setup, installation, and operation, however, are the responsibility of the end user. Welker® reserves the right to make changes to IOM-268 and all products in order to improve performance and reliability.

SAVE INSTRUCTIONS

Save these Safety instructions and the instructions that comprise IOM-268 for local inspectors' use.

OBSERVE

Observe all governing codes and ordinances.

NOTE TO INSTALLER

Leave these Safety instructions and the instructions that comprise IOM-268 with the end user.

NOTE TO END USER

Keep these Safety instructions and the instructions that comprise IOM-268 for future reference.

NATURE OF INSTALLATION

Installation of this check valve is of a mechanical nature.

INSTALLATION RESPONSIBILITY

Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the warranty.



Welker®, W Welker®, W logo, WelkerScope®, WelkerJet®, and OdorEyes® are registered trademarks of Welker, Inc.

13839 West Bellfort Street
Sugar Land, Texas 77498
281.491.2331 | welker.com
Copyright © 1997–2025, Welker, Inc.
All Rights Reserved.