



INSTALLATION, OPERATION, AND MAINTENANCE MANUAL  
WELKER ECOSYSTEM™ PULSE BYPASS SYSTEM  
WITH XLT CONTROLLER



**DRAWING NUMBERS**

OE153VS  
OE180VS.1  
OE181VS  
OE181VS.3E  
OE183VS.1E  
OE190VS  
OE220VS.1E

**MANUAL NUMBER**

IOM-181

**REVISION**

Rev. C, 06/25/2019

## TABLE OF CONTENTS

	<b>SAFETY</b>	<b>3</b>
<b>1.</b>	<b>PRODUCT INFORMATION</b>	<b>4</b>
1.1	Introduction	4
1.2	Product Description	4
1.3	Safety Warning	4
1.4	Specifications	5
1.5	Equipment Diagrams	6
<b>2.</b>	<b>INSTALLATION &amp; OPERATION</b>	<b>16</b>
2.1	Before You Begin	16
2.2	Installation	16
2.3	Start-Up Procedures	18
<b>3.</b>	<b>XLT TOUCH SCREEN CONTROLLER</b>	<b>20</b>
3.1	Understanding the Display	20
3.2	Navigating the Monitor Screens	21
3.3	Navigating the Setup Screens	28
<b>4.</b>	<b>MAINTENANCE</b>	<b>46</b>
4.1	Before You Begin	46
4.2	Maintenance	46
	<b>APPENDICES</b>	<b>47</b>
	A: Referenced or Attached Documents	47
	B: Maintenance Schedule	48

## IMPORTANT SAFETY INFORMATION

### READ ALL INSTRUCTIONS



Notes emphasize information and/or provide additional information to assist the user.



Caution messages appear before procedures that could result in damage to equipment if not observed.



Warning messages appear before procedures that could result in personal injury if not observed.

*This manual is intended to be used as a basic installation and operation guide for the Welker OdorEyes ECOsystem™ Pulse Bypass System With XLt Controller. For comprehensive instructions, please refer to the IOM Manuals for each individual component. A list of relevant component IOM Manuals is provided in Appendix A of this manual.*

*The information in this manual has been carefully checked for accuracy and is intended to be used as a guide for the installation, operation, and maintenance of the Welker OdorEyes equipment described in this manual. Correct installation and operation, however, are the responsibility of the end user. Welker reserves the right to make changes to this manual and all products in order to improve performance and reliability.*

### BEFORE YOU BEGIN

Read these instructions completely and carefully.

**IMPORTANT** – Save these instructions for local inspector's use.

**IMPORTANT** – Observe all governing codes and ordinances.

**Note to Installer** – Leave these instructions with the end user.

**Note to End User** – Keep these instructions for future reference.

Installation of this ECOsystem™ Pulse Bypass System is of a mechanical and electrical nature.

Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the warranty.

If you received a damaged ECOsystem™ Pulse Bypass System, please contact a Welker representative immediately.

**Phone:** 281.491.2331

**Address:** 13839 West Bellfort Street  
Sugar Land, TX 77498

## 1.1 Introduction

We appreciate your business and your choice of Welker products. The installation, operation, and maintenance liability for this equipment becomes that of the purchaser at the time of receipt. Reading the applicable *Installation, Operation, and Maintenance (IOM) Manuals* prior to installation and operation of this equipment is required for a full understanding of its application and performance prior to use.\*

If you have any questions, please call Welker at 1-281-491-2331.

*\*The following procedures have been written for use with standard Welker OdorEyes parts and equipment. Assemblies that have been modified may have additional requirements and specifications that are not listed in this manual.*

## 1.2 Product Description

The Welker OdorEyes *ECOsystem™ Pulse Bypass System With XLt Controller* is designed to infuse the customer pipeline proportional to flow with natural gas that has been supersaturated with vaporized odorant. This skid-mounted automatic bypass system has three (3) primary components: the touch screen controller, the valve section, and the odorant supply tank. Each primary component plays an integral role in the operation of the *ECOsystem™* and can be customized to better suit each application.

The touch screen controller serves as the system's brain. It continuously receives feedback from the customer's gas flow meter and the flow switch in the valve section, allowing the system to respond to changing flow conditions. As pipeline conditions change, the controller increases or decreases the injection rate so that the *ECOsystem™* continues infusing proportional to flow. On-site and remote troubleshooting and monitoring are made easier by time- and date-stamped audit data detailing system performance, alarm history, and odorant tank level. An optional solar panel generates renewable energy to power the system when an electrical source is unavailable.

The valve section contains one (1), two (2), or three (3) solenoids, which control the flow of gas through the odorant supply tank and into the pipeline. Having two (2) or three (3) solenoids allows the *ECOsystem™* to better respond to and accommodate varying flow rates and limits interruption to operation in the event of solenoid maintenance. To prolong the operational life of the regulator and solenoid(s), the Welker F-5 Filter Dryer conditions the natural gas supply. The flow switch communicates the solenoid operation to the controller to ensure proper odorization. For pulse bypass systems used in cold climates, a heater with thermostat can be added to replenish heat lost during regulation.

Each odorant supply tank is equipped with a tank fill inlet, vent port, blanket pressure inlet, level gauge, and outlet to the pipeline. The temperature transmitter communicates odorant temperature to the controller so the system can compensate for temperature changes within the odorant tank. For added automation, an electronic level transmitter can be installed to communicate tank level to the controller. Regardless of volume or orientation, the odorant supply tank comes with 110% containment that is sloped to the drain for easy draining.

*Welker may custom design the ECOsystem™ Pulse Bypass System With XLt Controller to suit the particular application and specifications of each customer.*

## 1.3 Safety Warning

Wherever hazardous gases or vapor-producing liquids are used, transported, or stored, the potential for an accidental leak exists. Continuous monitoring of these hazards is essential to ensure personnel safety.

## 1.4 Specifications



The specifications listed in this section are generalized for this equipment. Welker can modify the equipment according to your company's needs. **Please note that the specifications may vary depending on the customization of your equipment.**

**Table 1: ECOSystem™ Specifications**


<b>Application</b>	Vaporized Odorant Infusion
<b>Electrical Connection</b>	AC 120 V DC 12 V DC 24 V
<b>Odorant Tank Volume</b>	5 US Gallons (18 L) 20 US Gallons (75 L) 50 US Gallons (189 L) 60 US Gallons (227 L) 100 US Gallons (378 L) 120 US Gallons (454 L) 250 US Gallons (946 L) 500 US Gallons (1892 L) Others Available
<b>Features</b>	Odorant Tank Level Gauge Skid With 110% Containment Temperature Transmitter Touch Screen Controller Valve Section (See Table 2)
<b>Options</b>	Flag Tracker Level Indicator Heater for Controller Enclosure NEMA 4 or NEMA 7 Enclosure for Controller Solar Panel Steel Building

**Table 2: Valve Section Specifications**


<b>Tubing Size</b>	<b>Low Flow:</b> ¼" (0.6 cm) <b>High Flow:</b> ⅜" (0.9 cm) <b>Variable Flow:</b> ¼" and ⅜" (0.6 and 0.9 cm)
<b>Features</b>	2-Way Solenoid Valve Flow Switch Regulator for Natural Gas Supply Welker F-5 Filter Dryer for Natural Gas Supply
<b>Options</b>	Backup Solenoid Enclosure Heater With Thermostat Low Flow Solenoid Volume Bottle (for Systems With ⅜" (0.9 cm) Tubing)

# 1.5 Equipment Diagrams

**Figure 1: General Arrangement – Horizontal Odorant Tank**

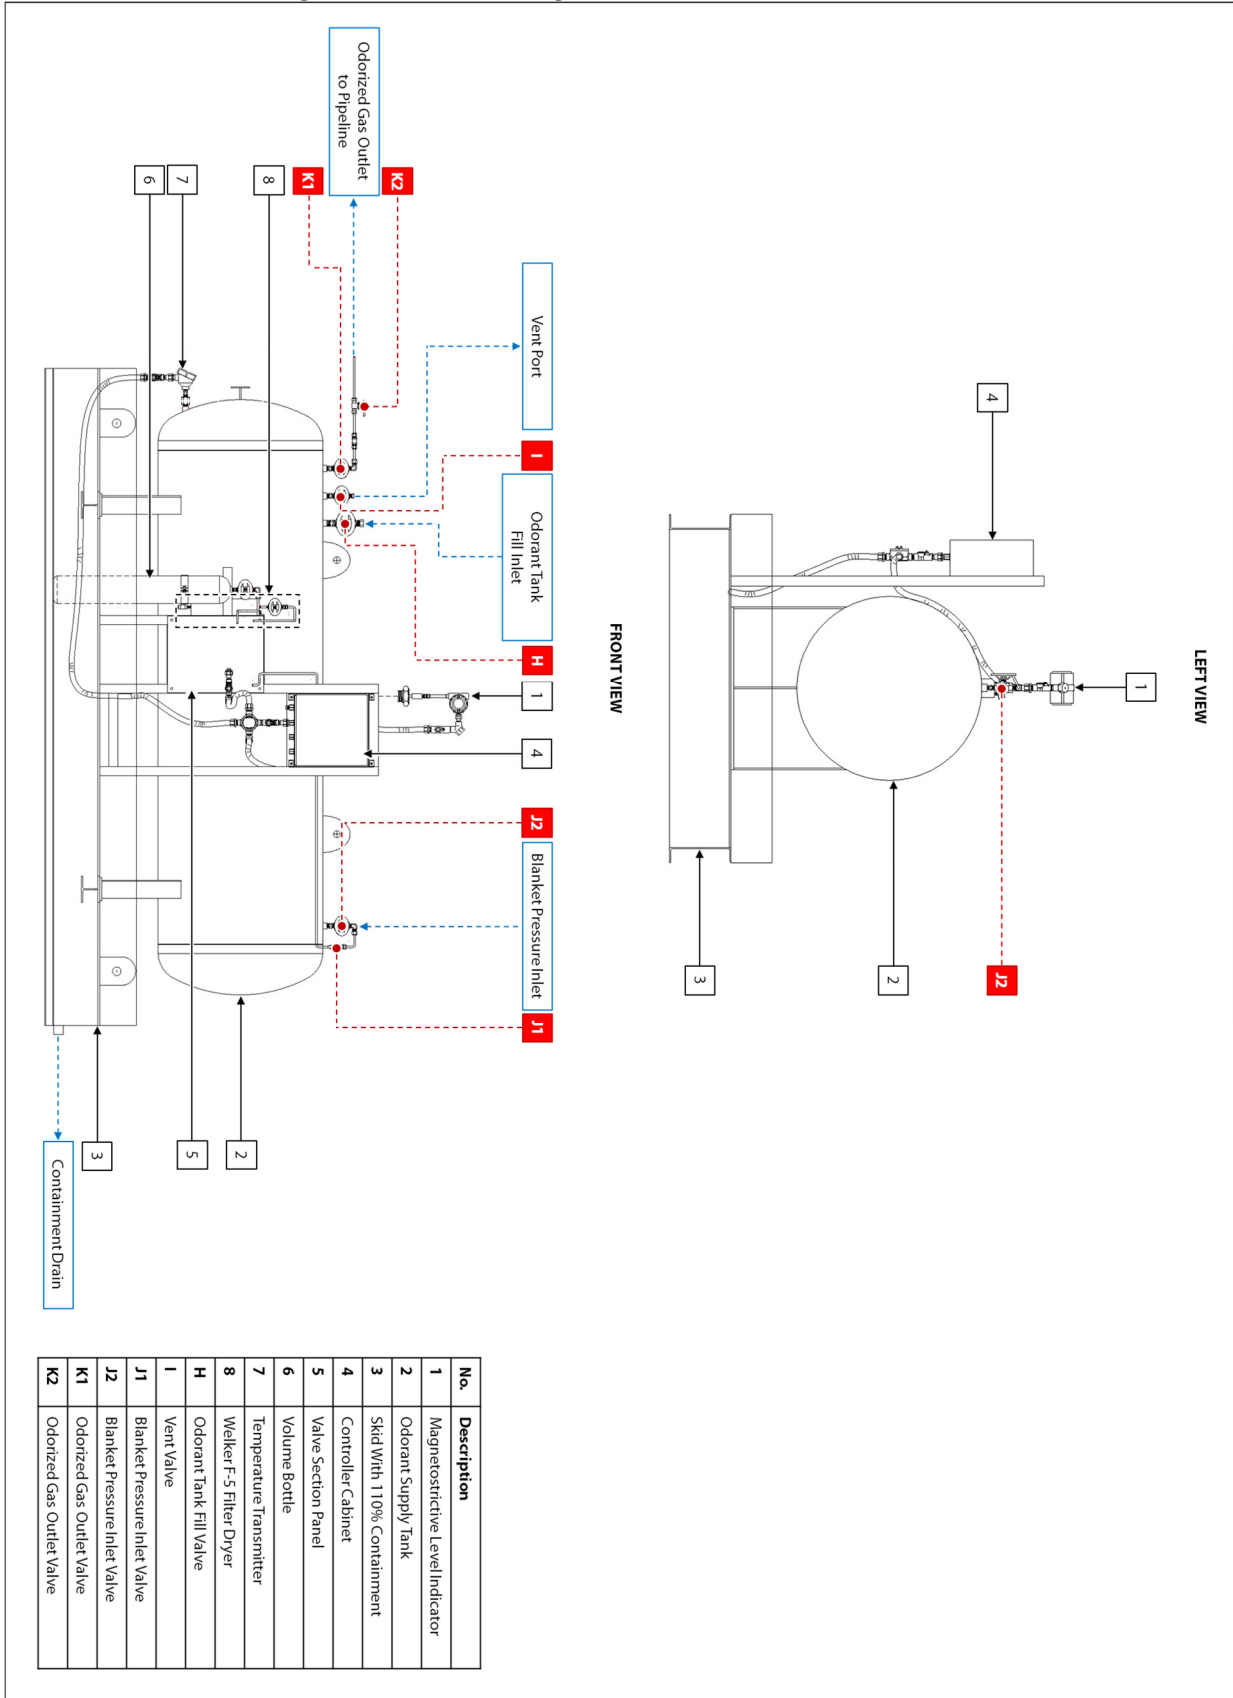


**Figure 2: General Arrangement – Vertical Odorant Tank**

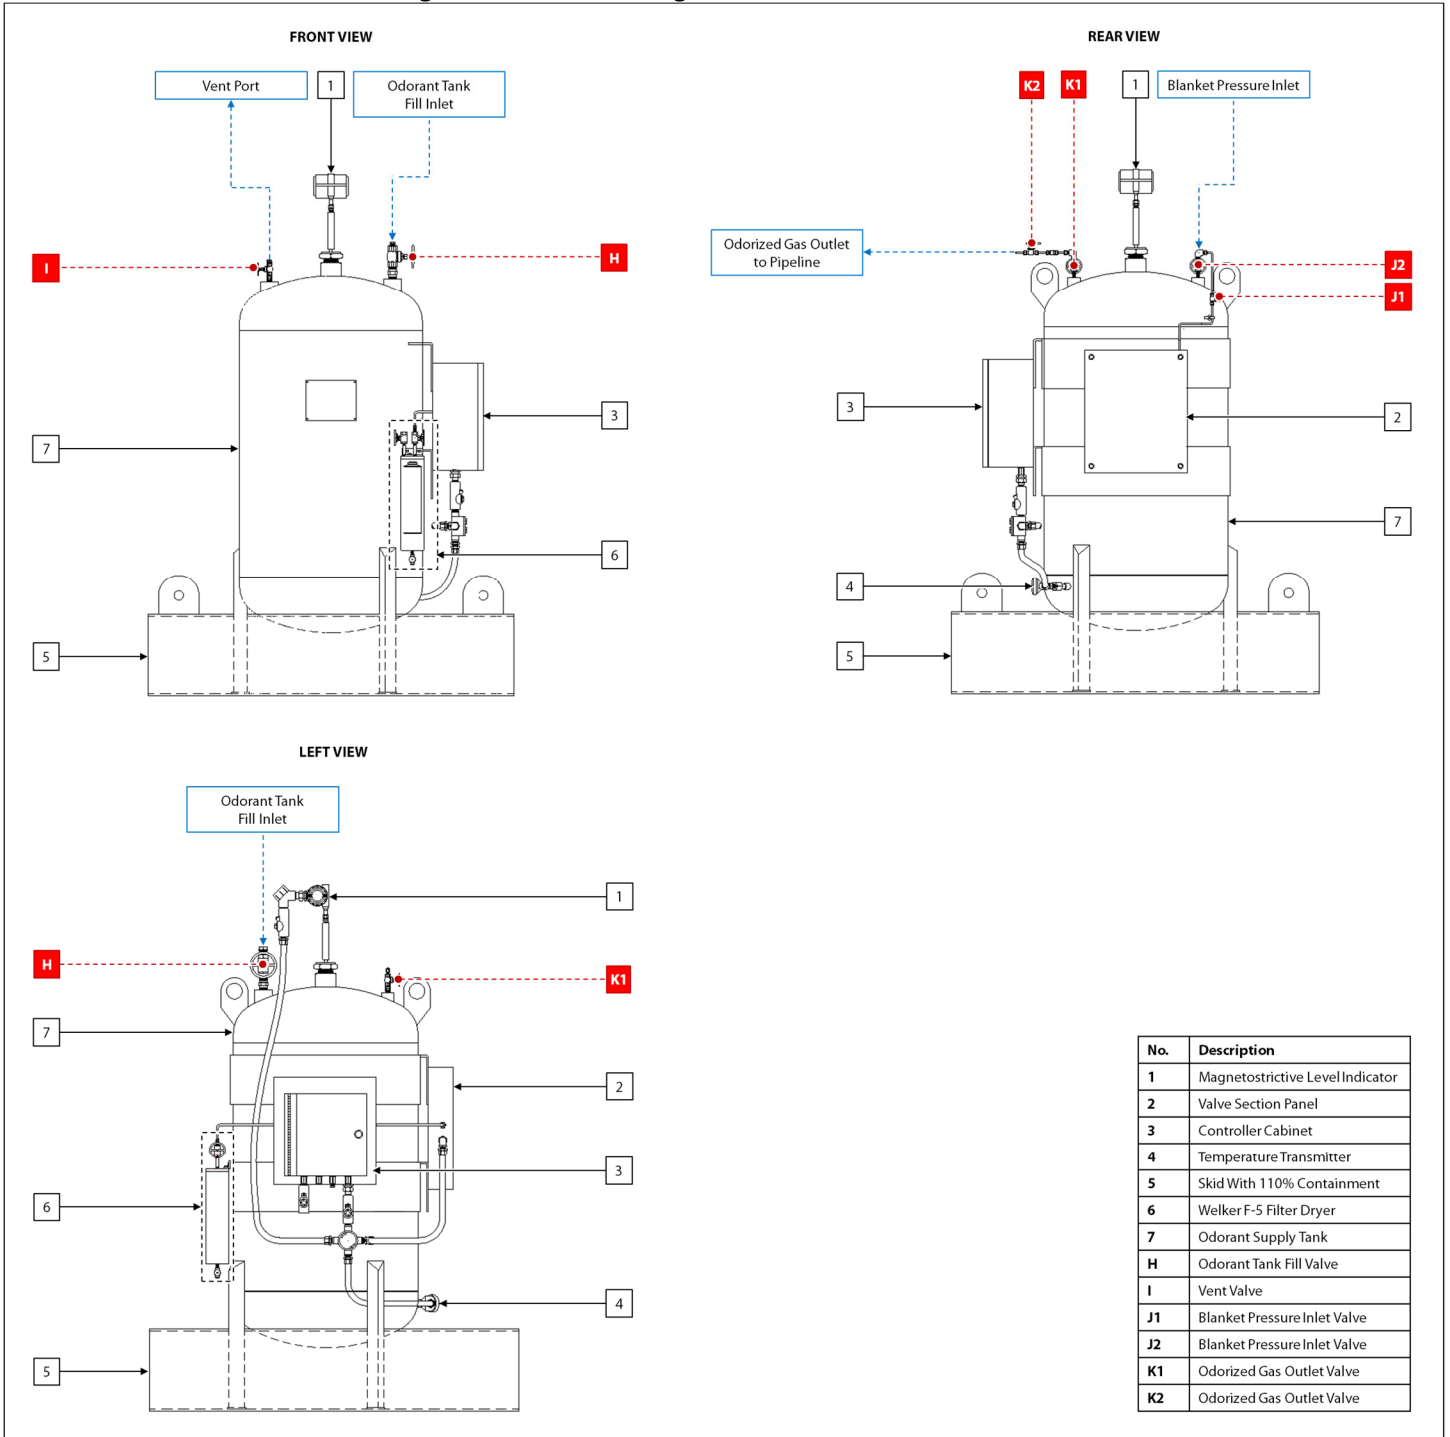


No.	Description
1	Magnetostrictive Level Indicator
2	Valve Section Panel
3	Controller Cabinet
4	Temperature Transmitter
5	Skid With 110% Containment
6	Welker F-5 Filter Dryer
7	Odorant Supply Tank
H	Odorant Tank Fill Valve
I	Vent Valve
J1	Blanket Pressure Inlet Valve
J2	Blanket Pressure Inlet Valve
K1	Odorized Gas Outlet Valve
K2	Odorized Gas Outlet Valve

**Figure 3: Valve Section – Single Solenoid, 3/8" Tubing**

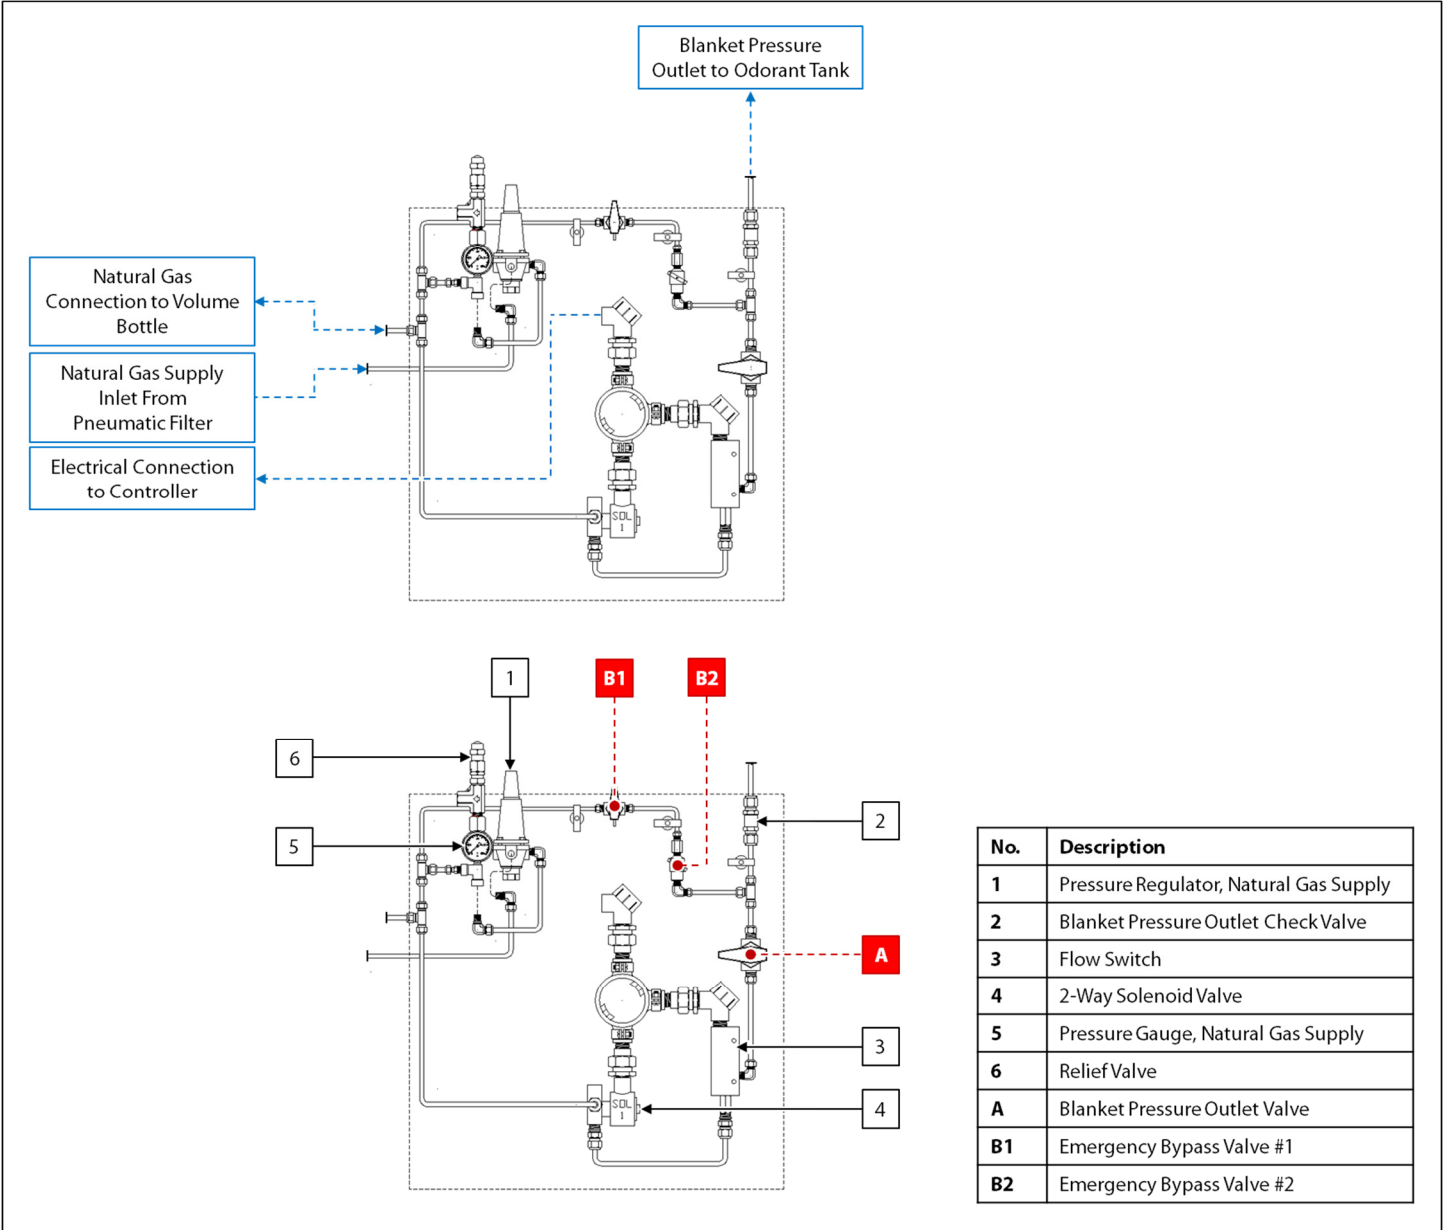




**Figure 4: Valve Section – Dual Solenoid, 3/8" Tubing**

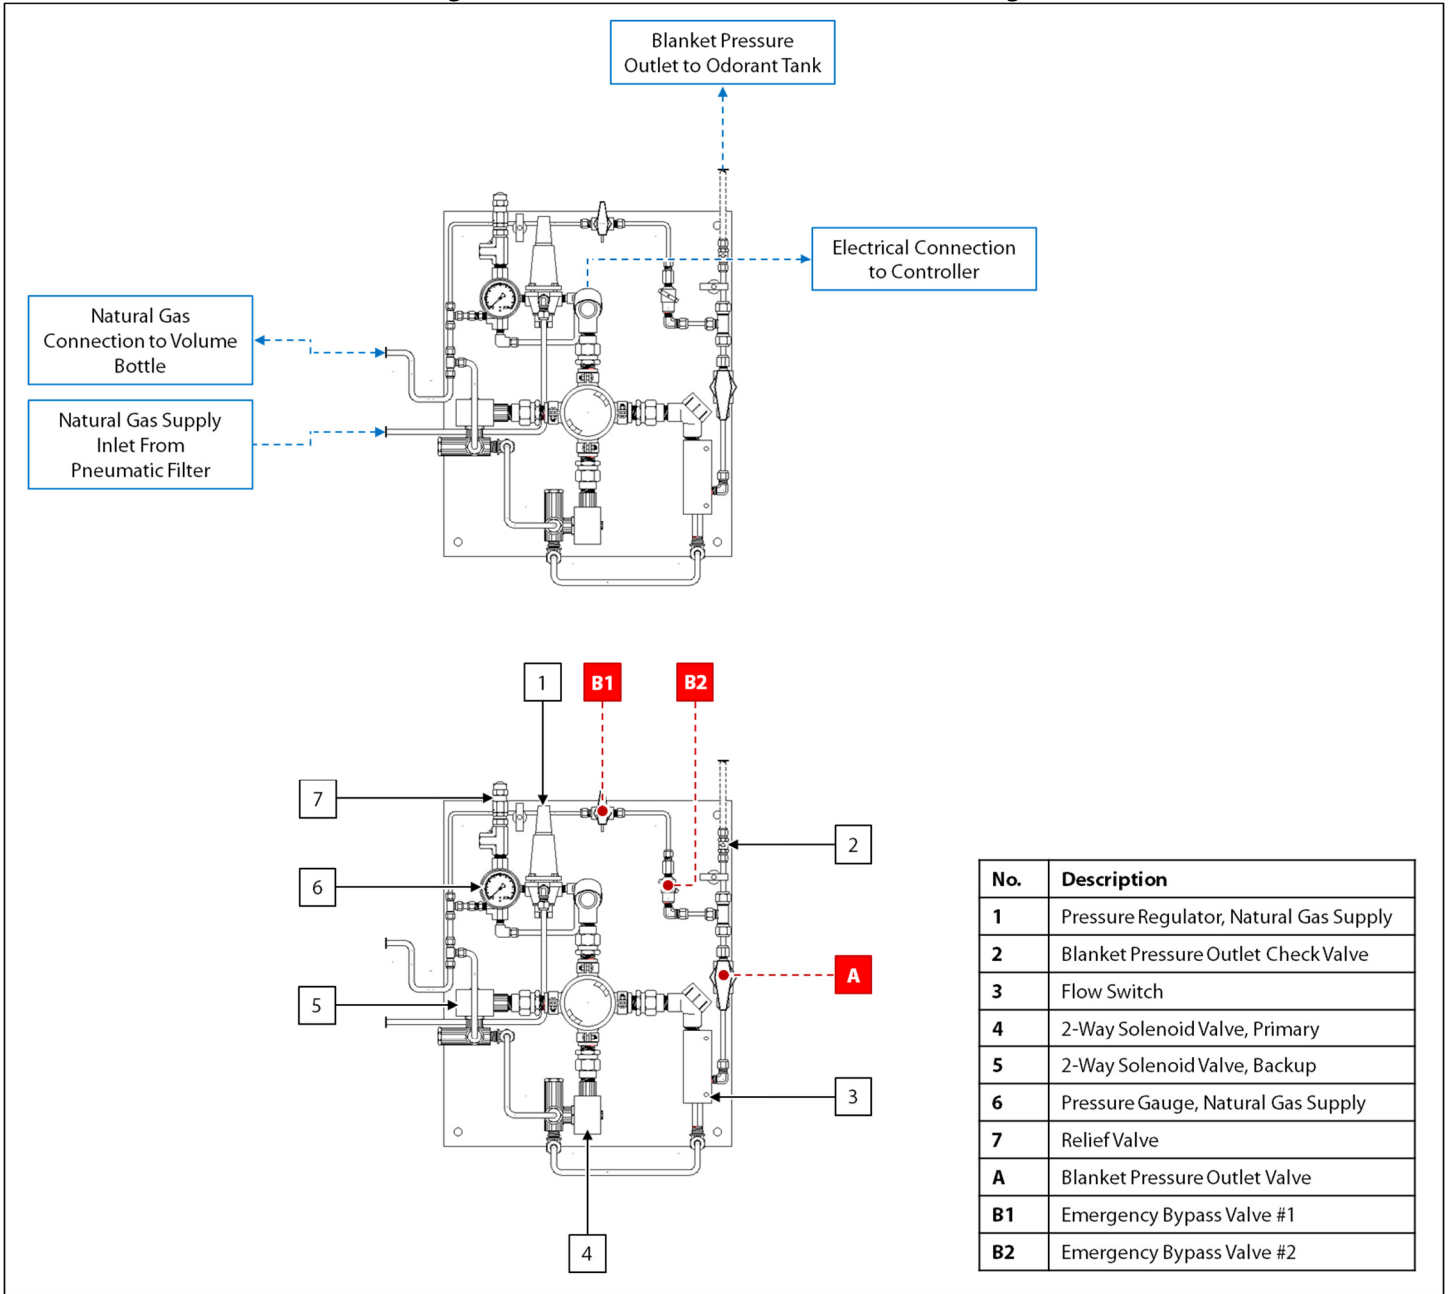



No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	Flow Switch
4	2-Way Solenoid Valve, Primary
5	2-Way Solenoid Valve, Backup
6	Pressure Gauge, Natural Gas Supply
7	Relief Valve
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2

**Figure 5: Valve Section – Dual Solenoid With Heater, 3/8" Tubing**

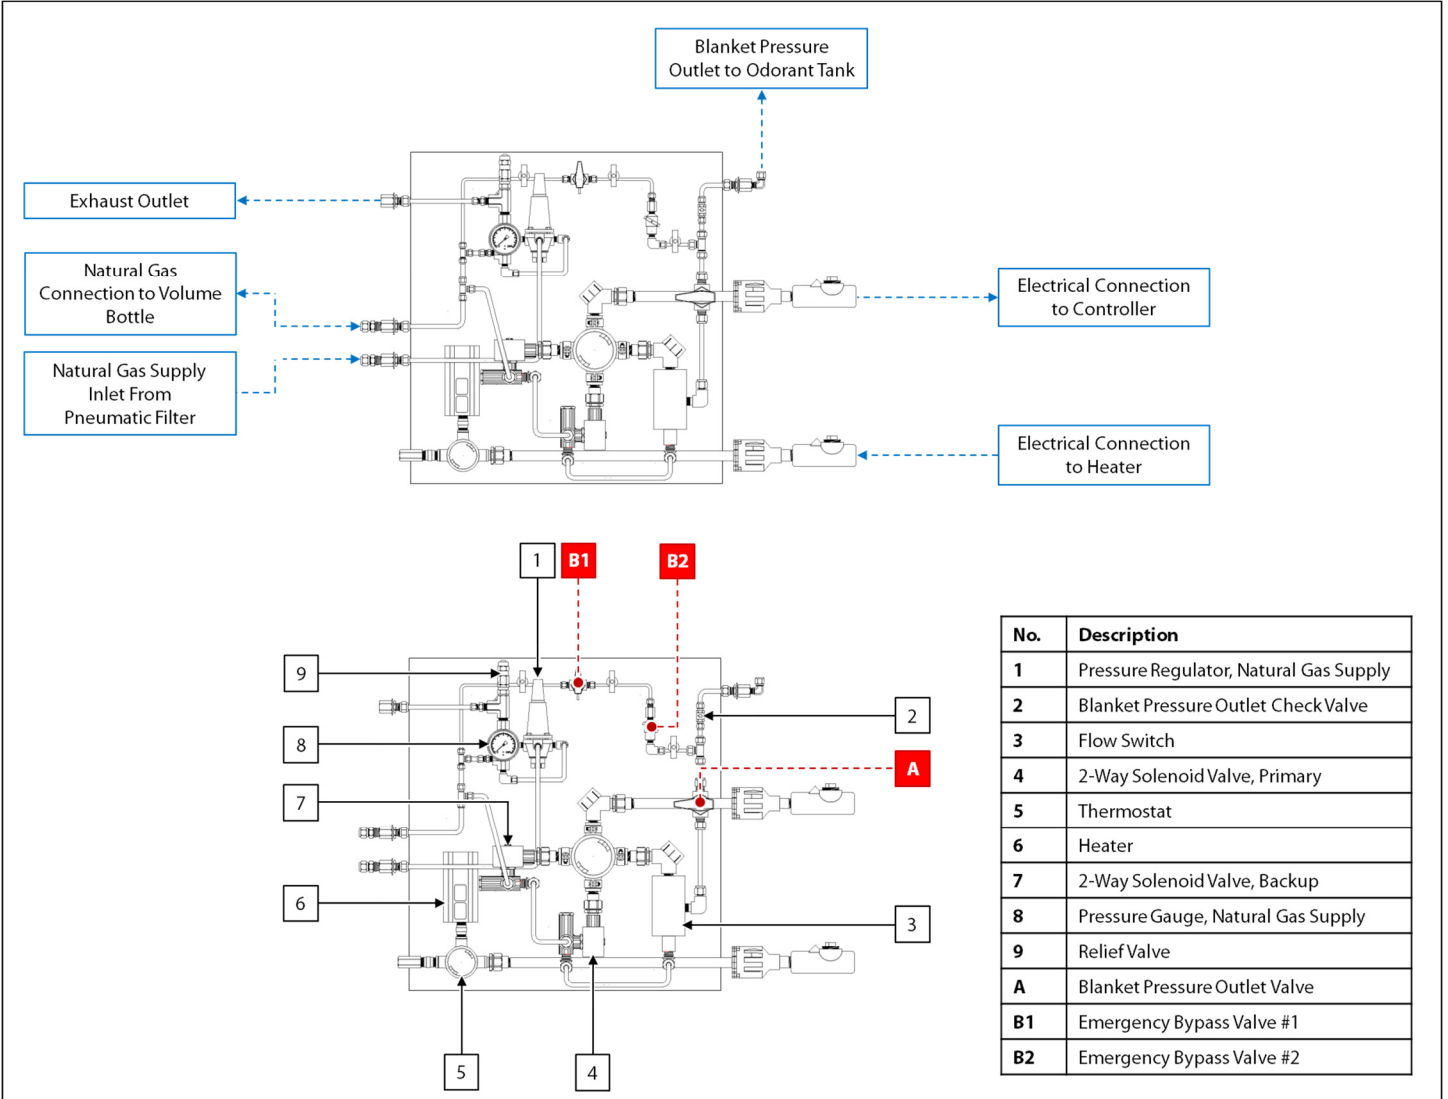



No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	Flow Switch
4	2-Way Solenoid Valve, Primary
5	Thermostat
6	Heater
7	2-Way Solenoid Valve, Backup
8	Pressure Gauge, Natural Gas Supply
9	Relief Valve
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2

**Figure 6: Valve Section – Single Solenoid, ¼" Tubing**

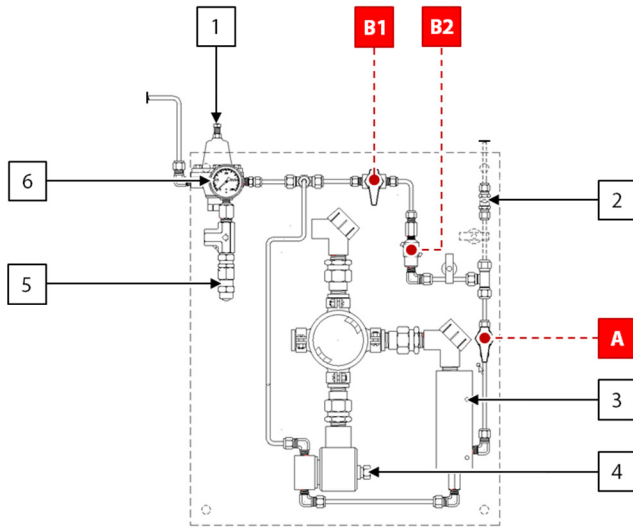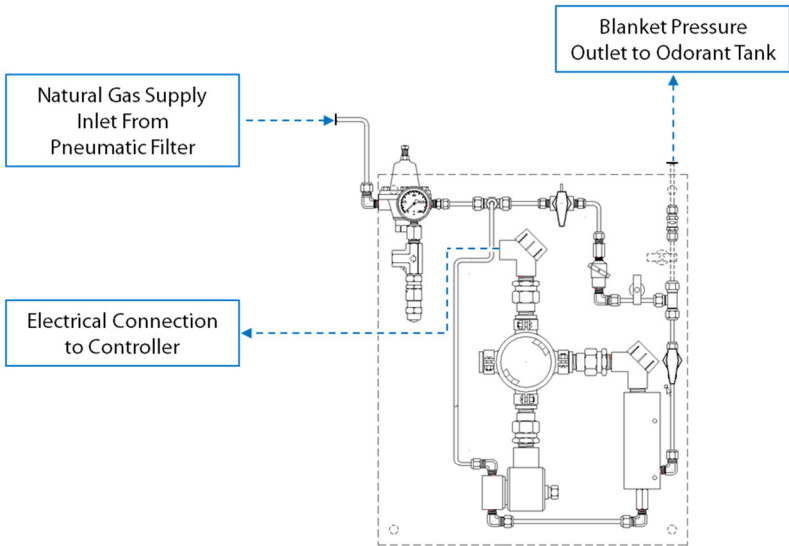



No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	Flow Switch
4	2-Way Solenoid Valve
5	Relief Valve
6	Pressure Gauge, Natural Gas Supply
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2

**Figure 7: Valve Section – Dual Solenoid, 1/4" Tubing**

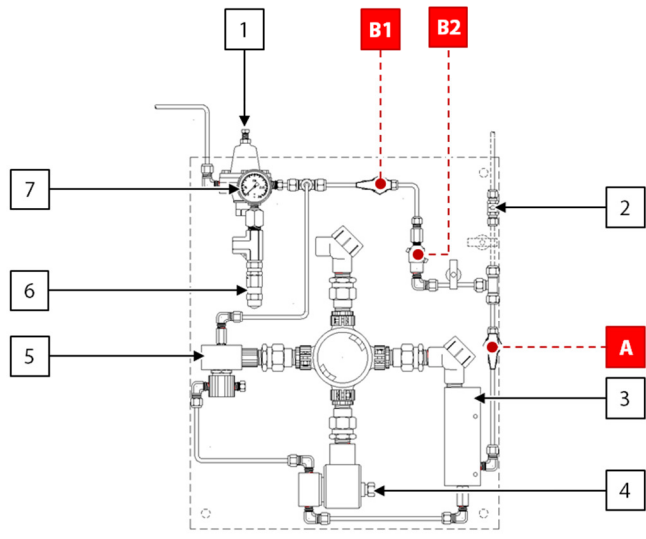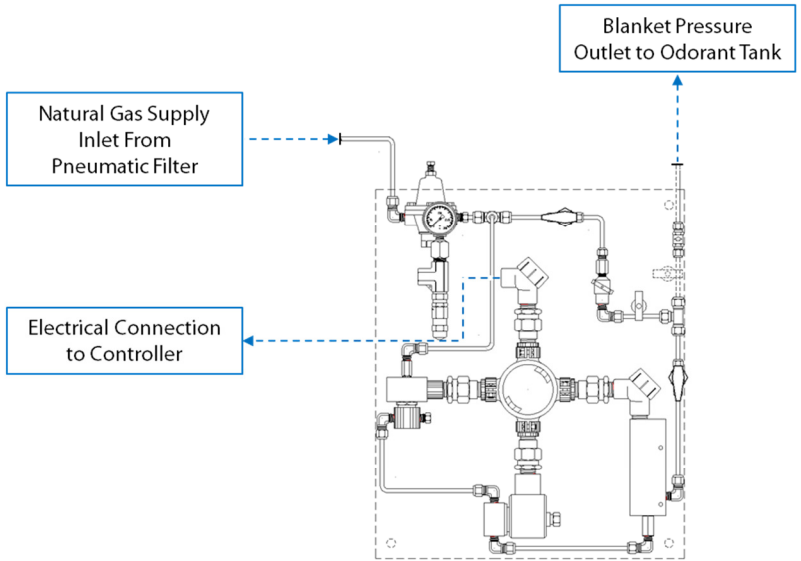



No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	Flow Switch
4	2-Way Solenoid Valve, Primary
5	2-Way Solenoid Valve, Backup
6	Relief Valve
7	Pressure Gauge, Natural Gas Supply
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2

**Figure 8: Valve Section – Dual Solenoid With Heater, ¼" Tubing**

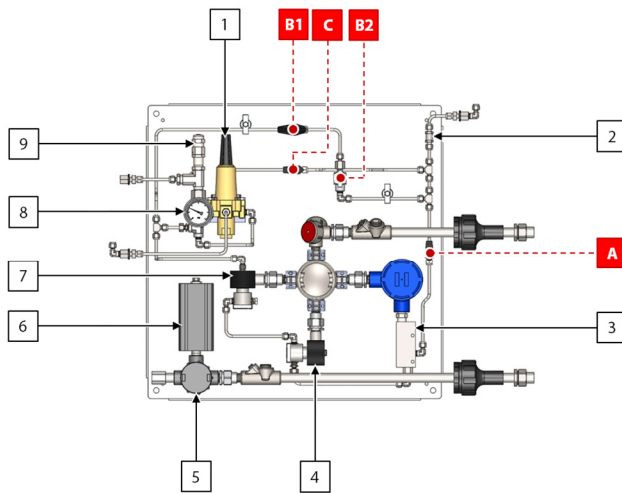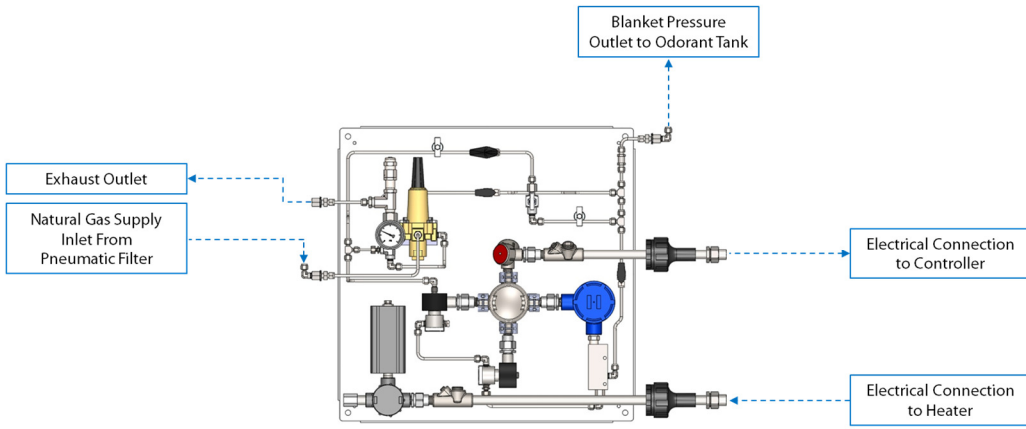


No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	Flow Switch
4	2-Way Solenoid Valve, Primary
5	Thermostat
6	Heater
7	2-Way Solenoid Valve, Backup
8	Pressure Gauge, Natural Gas Supply
9	Relief Valve
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2
C	Regulator Outlet Valve

**Figure 9: Valve Section – Triple Solenoid With Heater, 1/4" and 3/8" Tubing**

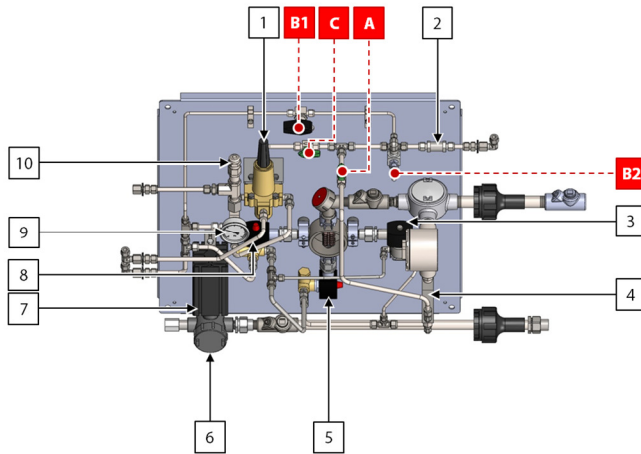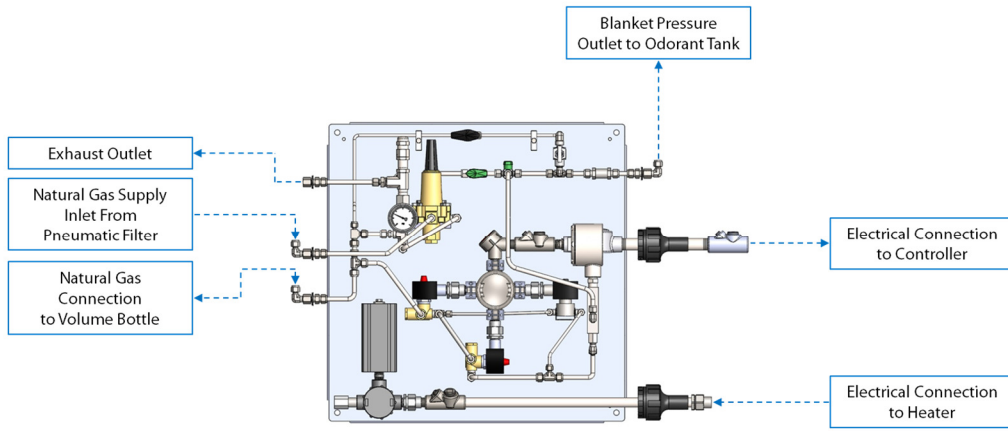


No.	Description
1	Pressure Regulator, Natural Gas Supply
2	Blanket Pressure Outlet Check Valve
3	2-Way Solenoid Valve, Low Flow
4	Flow Switch
5	2-Way Solenoid Valve, High Flow
6	Thermostat
7	Heater
8	2-Way Solenoid Valve, Backup
9	Pressure Gauge, Natural Gas Supply
10	Relief Valve
A	Blanket Pressure Outlet Valve
B1	Emergency Bypass Valve #1
B2	Emergency Bypass Valve #2
C	Regulator Outlet Valve

**Figure 10: Pneumatic Filter**

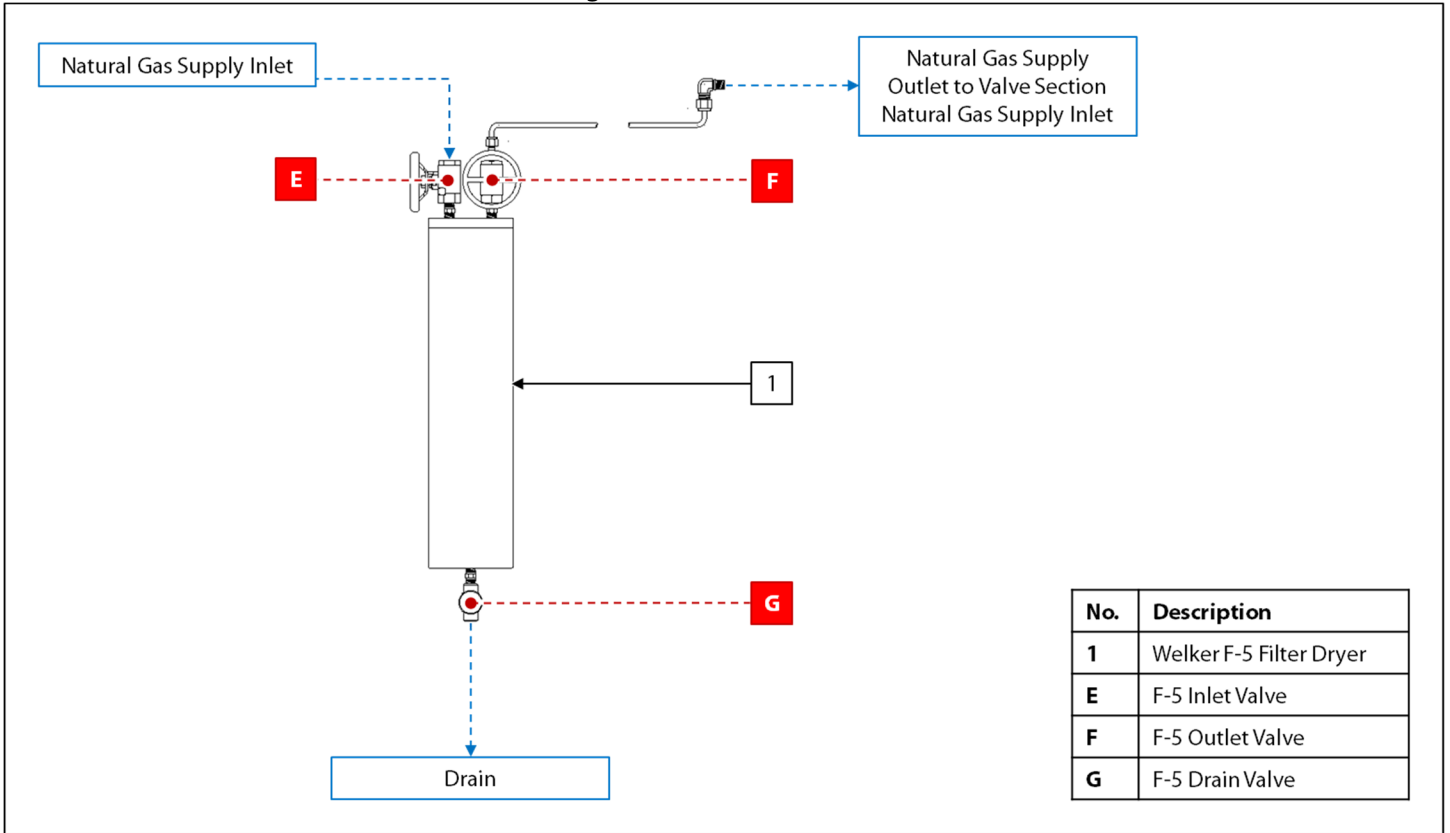

**Figure 11: Volume Bottle Diagram (Applicable for Valve Sections With  $\frac{3}{8}$ " Tubing)**

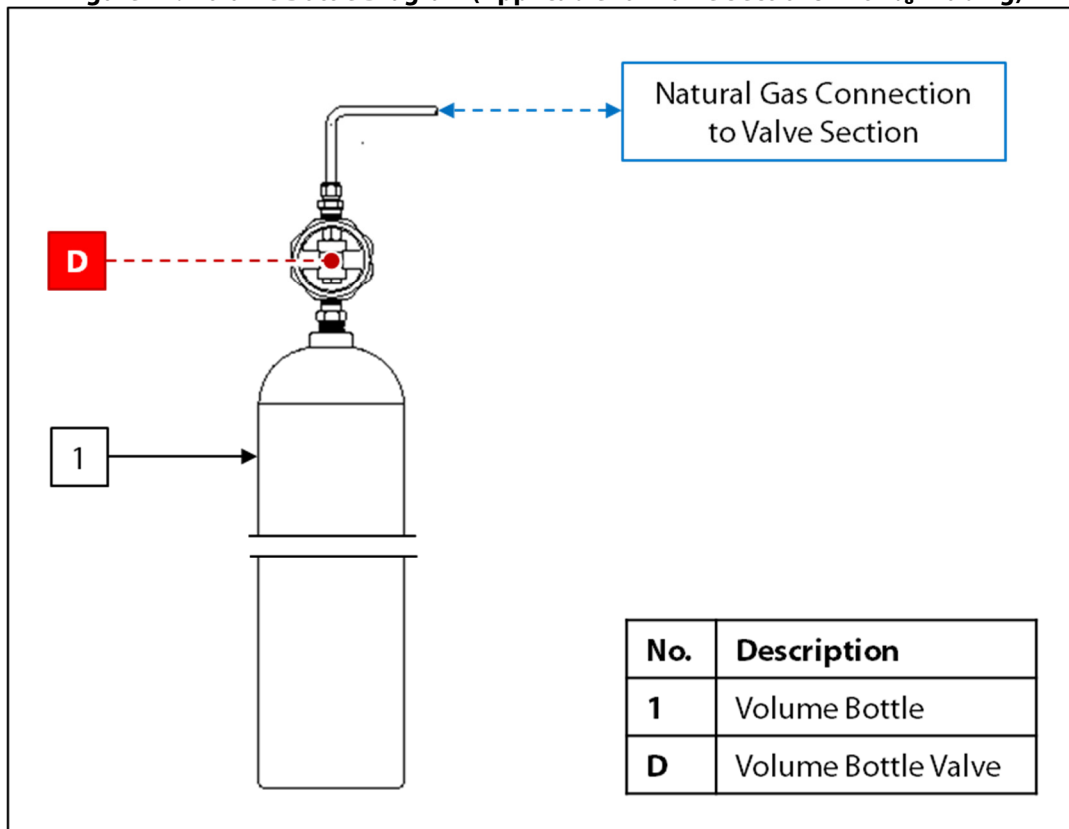

## SECTION 2: INSTALLATION & OPERATION

### 2.1 Before You Begin



After unpacking the unit, check the equipment for compliance and any damage that may have occurred during shipment. Immediately contact a Welker representative if you received damaged equipment.



When sealing fittings with PTFE tape, refer to the proper sealing instructions for the brand used.



The ECOSystem™ will ship skid-mounted and “hard-tube” connected with manufacturer-supplied fittings and hardware. However, the customer will need to supply some tubing and fittings in order to complete the installation of the system.



The ECOSystem™ must be installed in a section of the natural gas pipeline with a regulated pressure drop, such as a regulator station or gate station.



All electrical connections must meet local and national electric codes, and excessive weight added to the conduit run must be supported.

### 2.2 Installation

#### System Skid

1. Mount the skid to a flat, level surface, such as a concrete slab.
2. Connect a grounding wire to each grounding lug on the skid to safely ground the system.
3. Connect the skid drain port(s) to an appropriate draining location.

#### System Connections

4. Using appropriately sized customer-supplied tubing, connect from the outlet of the pipeline upstream of the regulated pressure drop to the inlet of the Welker F-5 Filter Dryer (*Figure 10*).



Tubing must have a minimum diameter of  $\frac{3}{8}$ ".

5. Connect from odorized gas outlet valve K2 to an unused valve on the natural gas pipeline downstream of the regulated pressure drop (*Figure 1* or *Figure 2*).



Welker recommends using stainless steel tubing for all natural gas process lines, as plastic tubing can absorb odorant from the gas.

6. Ensure that all valves on the system are closed.
7. Ensure that all fittings, connections, and bolts are tightened.



## **Electrical Connections**



Turn OFF the electrical supply prior to making electrical connections.

8. Connect an appropriate electrical supply to the controller. Refer to industry standards for appropriate electrical connections to interface with the PLC.



For systems used in hazardous locations, sealing compound is required to seal all fittings to restrict the passage of gases, vapors, or flames.

9. Connect the customer gas flow signal device to the termination block.



The controller can accept analog or pulse input.

10. If the ECOsystem™ is not equipped with the optional flag tracker level indicator, installation is now complete; proceed to *Section 2.3, Start-Up Procedures*. If the ECOsystem™ is equipped with the optional flag tracker level indicator, continue to step 11.

### **Flag Tracker Level Indicator (Optional)**



The float and gasket must be installed to the flag tracker level indicator prior to filling the odorant supply tank.



The float and gasket are packaged separately for shipment.

11. Remove the bottom drain flange from the base of the level indicator.
12. Install the float to the spring on the bottom drain flange. The top of the float should point up.



The top of the float is marked to ensure proper orientation.



The spring attached to the bottom drain flange cushions the float when the odorant supply tank is empty.

13. Replace the shipping gasket with the provided gasket.
14. Install the bottom drain flange with float to the level indicator.

## 2.3 Start-Up Procedures

### Odorant Supply Tank

1. Open emergency bypass valves B1 and B2 (*Figure 3, Figure 4, Figure 5, Figure 6, Figure 7, Figure 8, or Figure 9*).
2. Fill the odorant supply tank in accordance with company policy and procedure, taking care not to exceed 80% of the total volume of the supply tank.



Never fill the odorant supply tank above 80% of its capacity. Allow at least 20% for product expansion, should the tank be exposed to increased temperatures.

3. Check the odorant supply tank for leaks and repair as necessary.
4. Close emergency bypass valves B1 and B2 (*Figure 3, Figure 4, Figure 5, Figure 6, Figure 7, Figure 8, or Figure 9*).

### Natural Gas Supply Regulator

5. As necessary, open any valves between the outlet on the natural gas pipeline and the F-5 inlet.
6. Open F-5 inlet valve E and F-5 outlet valve F (*Figure 10*).
7. Apply natural gas to the valve section to pressurize the natural gas supply regulator (*Figure 3, Figure 4, Figure 5, Figure 6, Figure 7, Figure 8, or Figure 9*).



The pneumatic supply regulator comes factory-set to the setting required to operate the solenoid(s).

8. If applicable, open regulator outlet valve C (*Figure 8 or Figure 9*).
9. If applicable, open volume bottle valve D (*Figure 11*). The volume bottle will fill with the conditioned natural gas.



Only systems with  $\frac{3}{8}$ " tubing are equipped with a volume bottle.

### Valve Configuration

10. Slowly open the valves indicated in Table 3.

**Table 3: Start-Up Valve Orientation**

Valve Letter	Valve Description	Reference Figures
A	Blanket Pressure Outlet	3–9
J1 & J2	Blanket Pressure Inlet	1 & 2
K1 & K2	Odorized Gas Outlet	1 & 2



Once odorized gas outlet valves K1 and K2 are open, gas may free flow from the odorant supply tank to the pipeline until pressure in the system equalizes. Note that free flow will last only for a short time and over-odorization will not occur.

11. If applicable, slowly open any valves between the odorized gas outlet on the odorant supply tank and the pipeline.
12. Check for leaks and repair as necessary.

## **Controller Configuration**

13. Verify that the customer set points have been correctly set by the manufacturer.

## **Verifying Solenoid and Flow Switch Operation**

14. From the controller, verify the correct operation of the solenoid and flow switch. From the Main Menu, select Setup Odorizer (*Figure 23*). From the Setup Odorizer menu, select View I/O (*Figure 41*).
15. As the controller opens the solenoid, verify that FlowSw and Sol 1 darken simultaneously.
16. As the controller closes the solenoid, verify that FlowSw and Sol 1 clear simultaneously.
17. Once the correct operation of the solenoid and flow switch has been confirmed, the ECOsystem™ is operational.

3.1 Understanding the Display



The touch screen controller is used to modify system parameters and view current system information and current alarm status.




The touch screen controller is a menu-driven system. The Home screen is the top screen in the menu tree (Figure 12).

Figure 12: Controller Menu Tree



## Navigating the Display

Figure 13: Navigation Keys

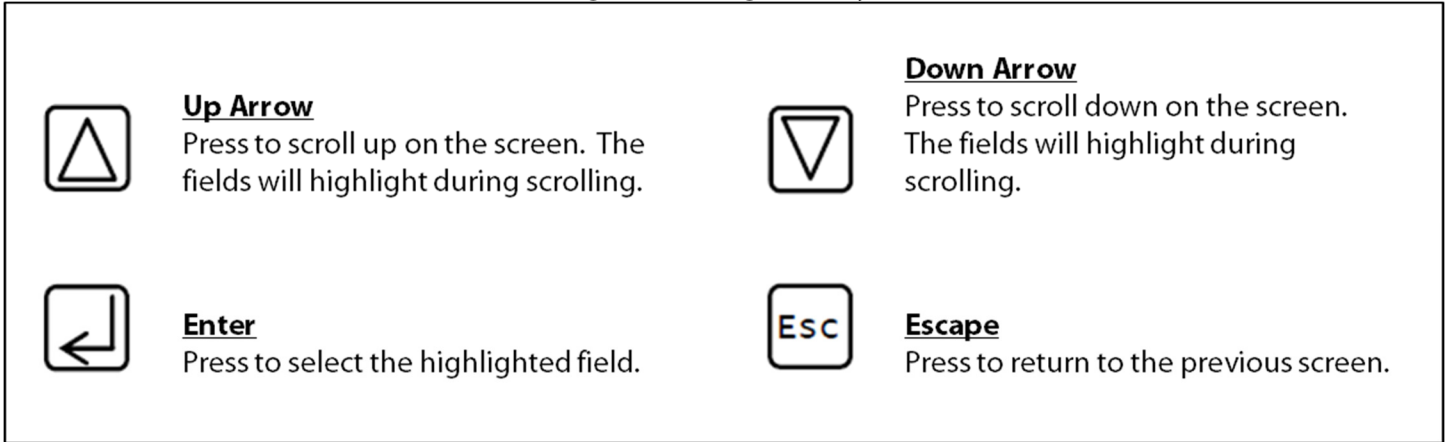

### 3.2 Navigating the Monitor Screens




Through the monitor screens, the user can access the System Status, Solenoid Stats, Odorant Tank Level, Current Alarms, Audit Trail, Alarms Log, Controller Version, and MicroSD Card to view current information for the odorizer.



Monitor screens are informational screens: no values can be changed from these screens.

Figure 14: Monitor Odorizer Submenus

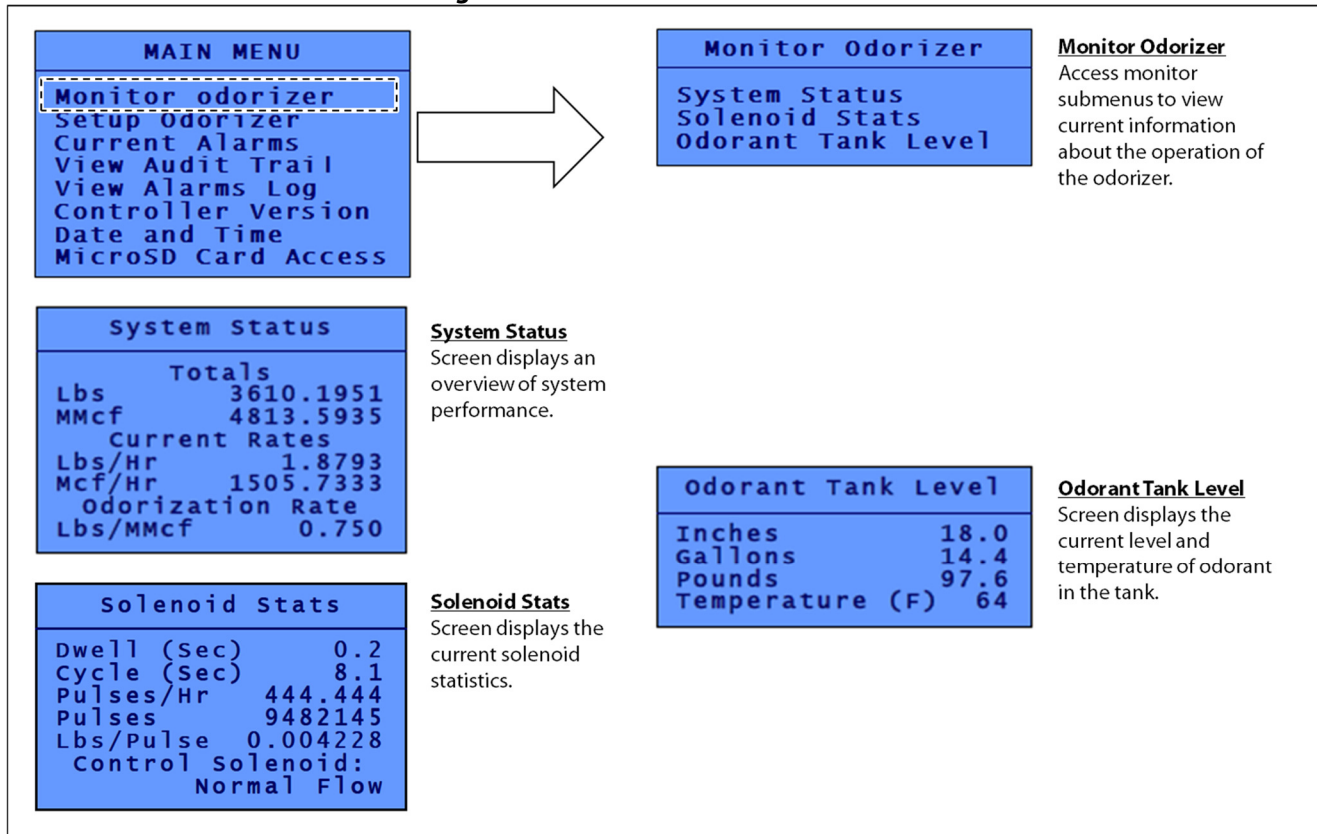

**System Status**



The System Status submenus provide the user with an overview of system performance.

**Figure 15: System Status Submenu**

<table border="1"> <tr><th colspan="2">Monitor Odorizer</th></tr> <tr><td>System Status</td><td></td></tr> <tr><td>Solenoid Stats</td><td></td></tr> <tr><td>Odorant Tank Level</td><td></td></tr> </table>	Monitor Odorizer		System Status		Solenoid Stats		Odorant Tank Level			<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>System Status</b> Screen displays an overview of system performance.</p>										
Monitor Odorizer																																							
System Status																																							
Solenoid Stats																																							
Odorant Tank Level																																							
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						
<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>Total Lbs</b> The total number of pounds of odorant that have been pulsed into the pipeline since the system was last reset.  This value must occasionally be manually reset at a time interval determined by the user.</p>	<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>Total MMcf</b> The total amount of gas flow the odorizer has seen since the system was last reset.  This value must occasionally be manually reset at a time interval determined by the user.</p>
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						
<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>Current Lbs/Hr</b> The current odorant usage by the system relative to time.</p>	<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>Current Mcf/Hr</b> The current volume of gas flowing in the pipeline relative to time.</p>
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						
<table border="1"> <tr><th colspan="2">System Status</th></tr> <tr><td colspan="2">Totals</td></tr> <tr><td>Lbs</td><td>3610.1951</td></tr> <tr><td>MMcf</td><td>4813.5935</td></tr> <tr><td colspan="2">Current Rates</td></tr> <tr><td>Lbs/Hr</td><td>1.8793</td></tr> <tr><td>Mcf/Hr</td><td>1505.7333</td></tr> <tr><td colspan="2">Odorization Rate</td></tr> <tr><td>Lbs/MMcf</td><td>0.750</td></tr> </table>	System Status		Totals		Lbs	3610.1951	MMcf	4813.5935	Current Rates		Lbs/Hr	1.8793	Mcf/Hr	1505.7333	Odorization Rate		Lbs/MMcf	0.750	<p><b>Odorization Rate</b> The current odorant usage by the system relative to gas flow (lb/MMcf).</p>																				
System Status																																							
Totals																																							
Lbs	3610.1951																																						
MMcf	4813.5935																																						
Current Rates																																							
Lbs/Hr	1.8793																																						
Mcf/Hr	1505.7333																																						
Odorization Rate																																							
Lbs/MMcf	0.750																																						



If the system status totals are used to track system performance, they should be periodically reset through the Controller Setup submenu (Figure 24). As the total values increase, they will begin to lose accuracy and will eventually stop accumulating.

**Solenoid Stats**

**Figure 16: Solenoid Stats Submenu**

The diagram illustrates the navigation from the **Monitor Odorizer** menu to the **Solenoid Stats** submenu. From there, it details four specific metrics: Dwell (sec), Cycle (sec), Pulses/Hr, and Lbs/Pulse, each with a definition and a corresponding screenshot of the data.

**Solenoid Stats**  
Screen displays the current solenoid statistics.

<b>Solenoid Stats</b>	<b>Dwell (sec)</b> The dwell time is the length of time (in seconds) the solenoid remains open each time it opens.	<b>Solenoid Stats</b>	<b>Cycle (sec)</b> The cycle time is how frequently (in seconds) the solenoid is opening.
<b>Solenoid Stats</b>	<b>Pulses/Hr</b> Pulses per hour is the number of times the solenoid will open per hour given the current dwell and cycle times.	<b>Solenoid Stats</b>	<b>Pulses</b> The total number of times the solenoid has pulsed odorant into the pipeline.
<b>Solenoid Stats</b>	<b>Lbs/Pulse</b> Pounds per pulse is the volume of odorant pulsed into the pipeline every time the solenoid opens.	<b>Solenoid Stats</b>	<b>Control Solenoid</b> This indicates which solenoid is currently operating.

**Odorant Tank Level**

**Figure 17: Odorant Tank Level Submenu**

The diagram shows the navigation from the **Monitor Odorizer** menu to the **Odorant Tank Level** submenu. It provides a description of the data shown on this screen and notes that the values are either from a transmitter or manually entered.

This screen displays the amount of odorant remaining in the odorant supply tank in inches, US gallons, and pounds, as well as the temperature of the odorant in degrees Fahrenheit.

These values will either be from a transmitter or manually entered.

## Viewing the Current Alarms

Figure 18: Current Alarms Screen

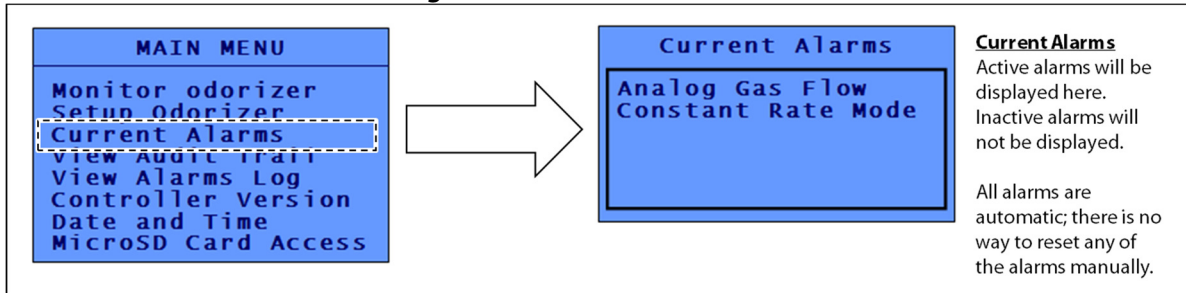


Table 4: Current Alarms

<b>Analog Gas Flow</b>	Can only be active if Analog mode is selected. The controller will go into the selected fail mode when this alarm is active. <b>NOTE:</b> If this alarm is active, verify that a 4–20 mA signal is being received from the flow meter.
<b>Pulse Gas Flow</b>	Can only be active if Pulse mode is selected. The controller will go into the selected fail mode when this alarm is active. <b>NOTE:</b> If this alarm is active, the pulse input cutoff time has expired. Verify that a pulse input is being received from the flow meter. If this alarm is active when the controller is receiving pulse input from the flow meter, Welker recommends increasing the pulse input cutoff time to prevent the alarm from becoming active prematurely.
<b>Constant Rate Mode</b>	Can only be active if Constant Rate Mode is specified as the desired fail mode. The controller will enter this gas flow fail mode when there is a gas flow signal loss.
<b>Shutdown Mode</b>	Can only be active if Shutdown Mode is specified as the desired fail mode. The controller will enter this gas flow fail mode when there is a gas flow signal loss.
<b>Fixed Mode</b>	Can only be active if Fixed Mode is enabled and the Fixed Alarm Rate is set. <b>NOTE:</b> If this alarm is active, the Fixed Alarm Rate will be the assumed gas flow in the system and will override any other input parameters. The Fixed Rate Alarm will not clear until Fixed Mode is disabled.
<b>Analog Temperature</b>	Can only be active if Transmitter is set as the RTD setup method. <b>NOTE:</b> If this alarm is active, verify that a 4–20 mA signal is being received from the temperature transmitter. If this alarm is active, the system will use the manually entered temperature; therefore, Welker recommends regularly updating the manual temperature value.
<b>Analog Tank Level</b>	Can only be active if an electronic level transmitter is used to track the odorant tank level and the controller loses the 4–20 mA signal from the transmitter. <b>NOTE:</b> If this alarm is active, the controller will automatically switch to the odorant flow method to track the odorant tank level. The controller will use the value of odorant in the tank and subtract the appropriate volume each time the solenoid opens.
<b>Tank Low Level</b>	Active if the odorant tank level has dropped below the specified value. <b>NOTE:</b> This alarm will clear once the tank is filled with odorant or the alarm set point is lowered.
<b>Odorant Overflow</b>	Active if the flow switch signals the controller indicating gas is passing through it even though the solenoid(s) should not be open. <b>NOTE:</b> If this alarm is active, it could be an indication that a solenoid is stuck open and that the system is over-odorizing or that the flow switch is stuck open.
<b>Odorant No Flow</b>	Active if the controller signals the solenoid to open but does not receive a signal from the flow switch confirming the solenoid has opened. <b>NOTE:</b> If this alarm is active, it could be an indication that the solenoid has failed closed or that the pressure differential across the system is not great enough to odorize.




## View Audit Trail



From the View Audit Tail submenu, the user can access the audit trail records stored on internal memory. Up to 600 audit trail records can be stored and viewed.

**Figure 19: View Audit Trail**

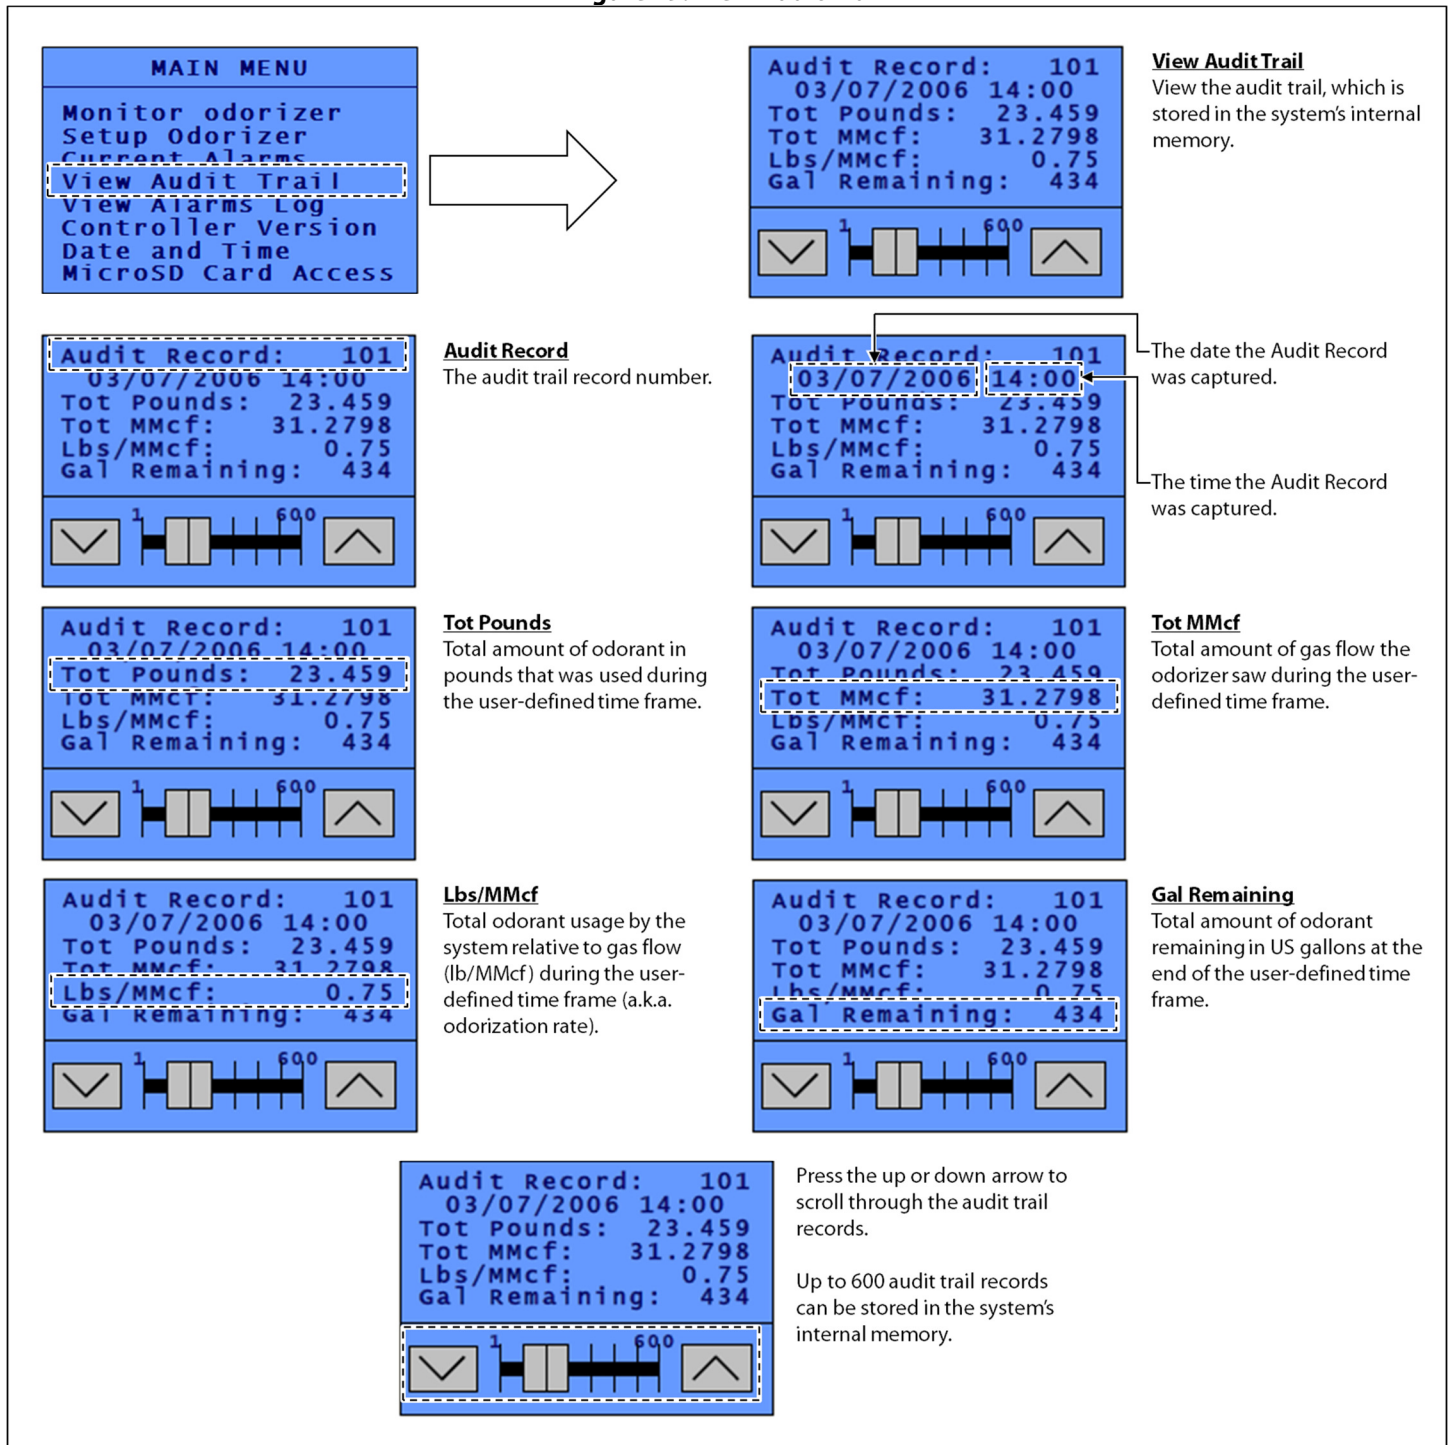


## View Audit Trail




From the View Alarms Log submenu, the user can access the alarms log stored on internal memory. Up to 428 alarms log records can be stored and viewed.

**Figure 20: View Alarms Log**

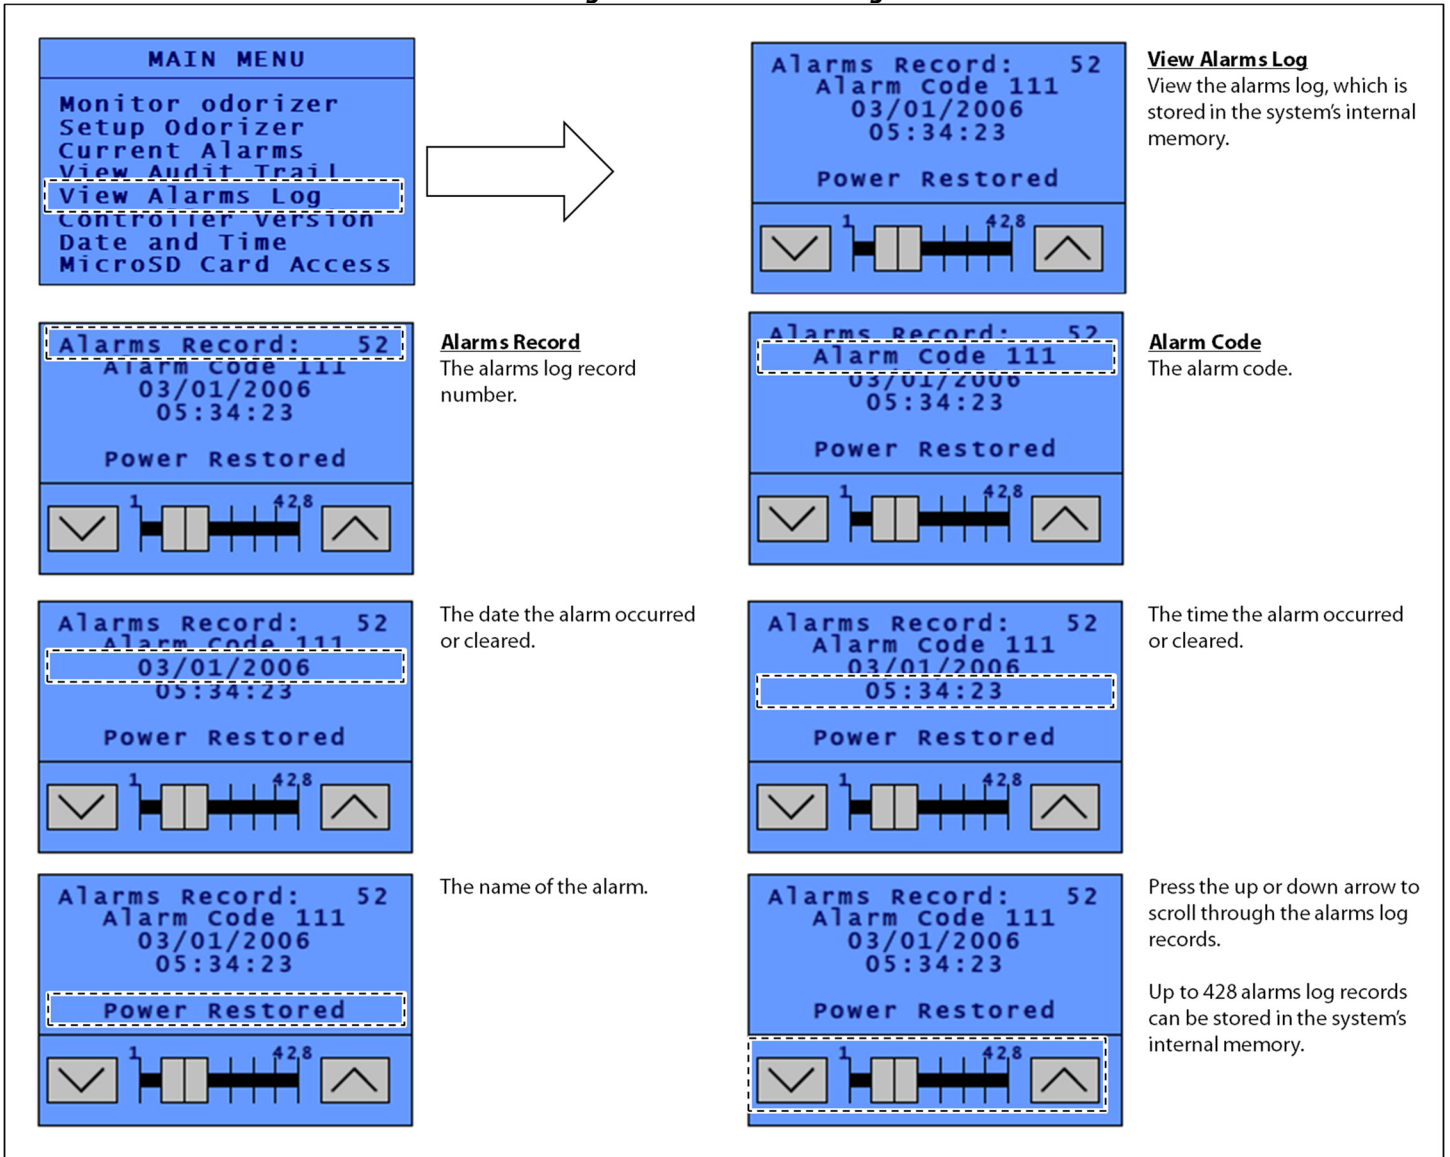


## Controller Version

Figure 21: Controller Version

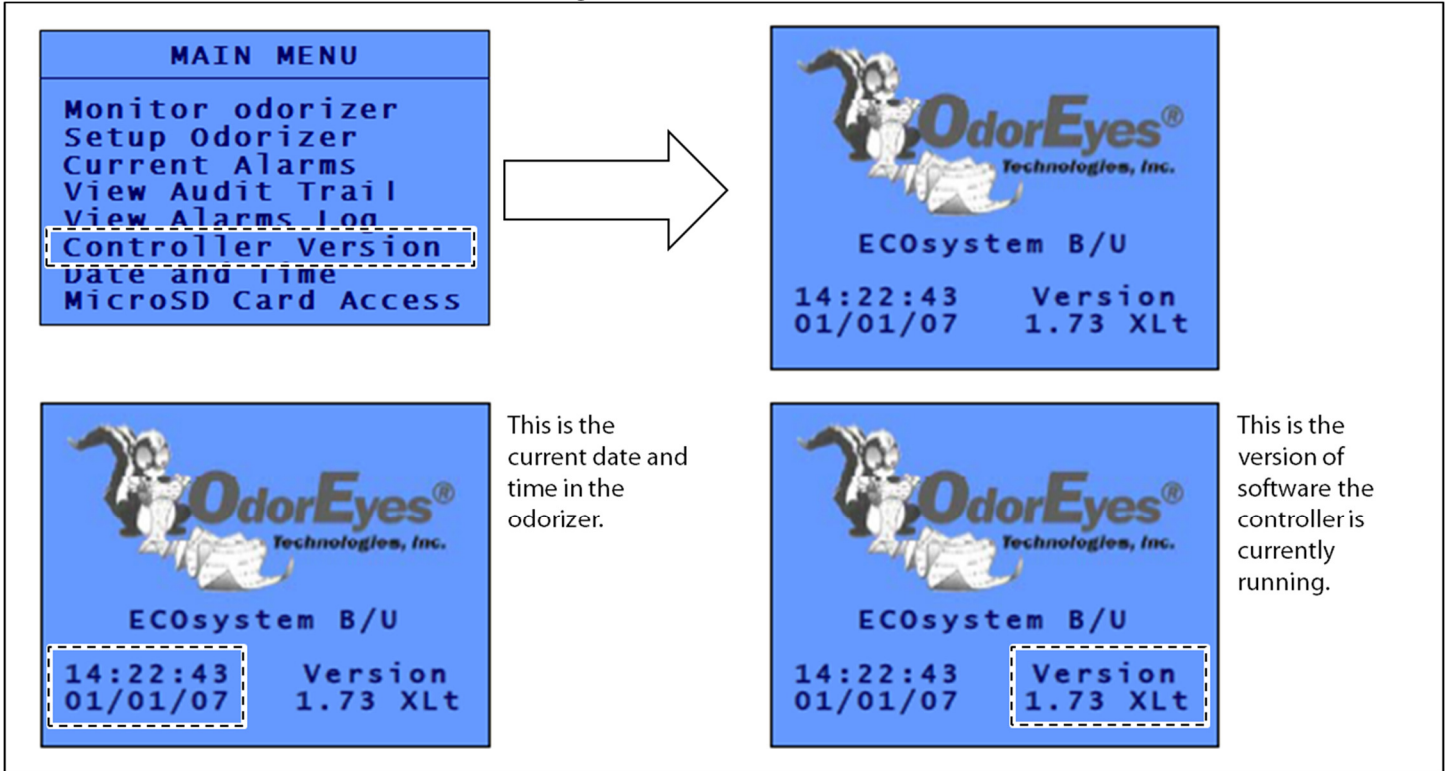

## MicroSD Card Access

Figure 22: MicroSD Card Access

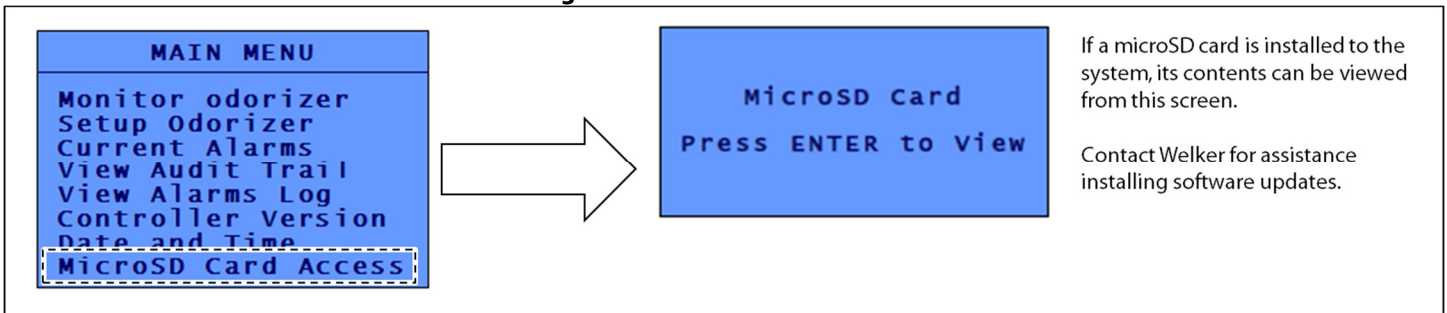

### 3.3 Navigating the Setup Screens




Through the Setup Odorizer submenu, the user can access the Controller Setup, Odorant Tank Setup, Gas Flow Signal, Fixed Rate Setup, Auto Scroll Setup, MODBUS Setup, Local Audit Trail, Local Alarms Log, and View I/O submenus and change numeric and/or text values that alter the parameters and features of the odorizer.



Changing numeric and/or text values in the Setup Odorizer submenus will alter how the system operates.

**Figure 23: Setup Odorizer Submenus**

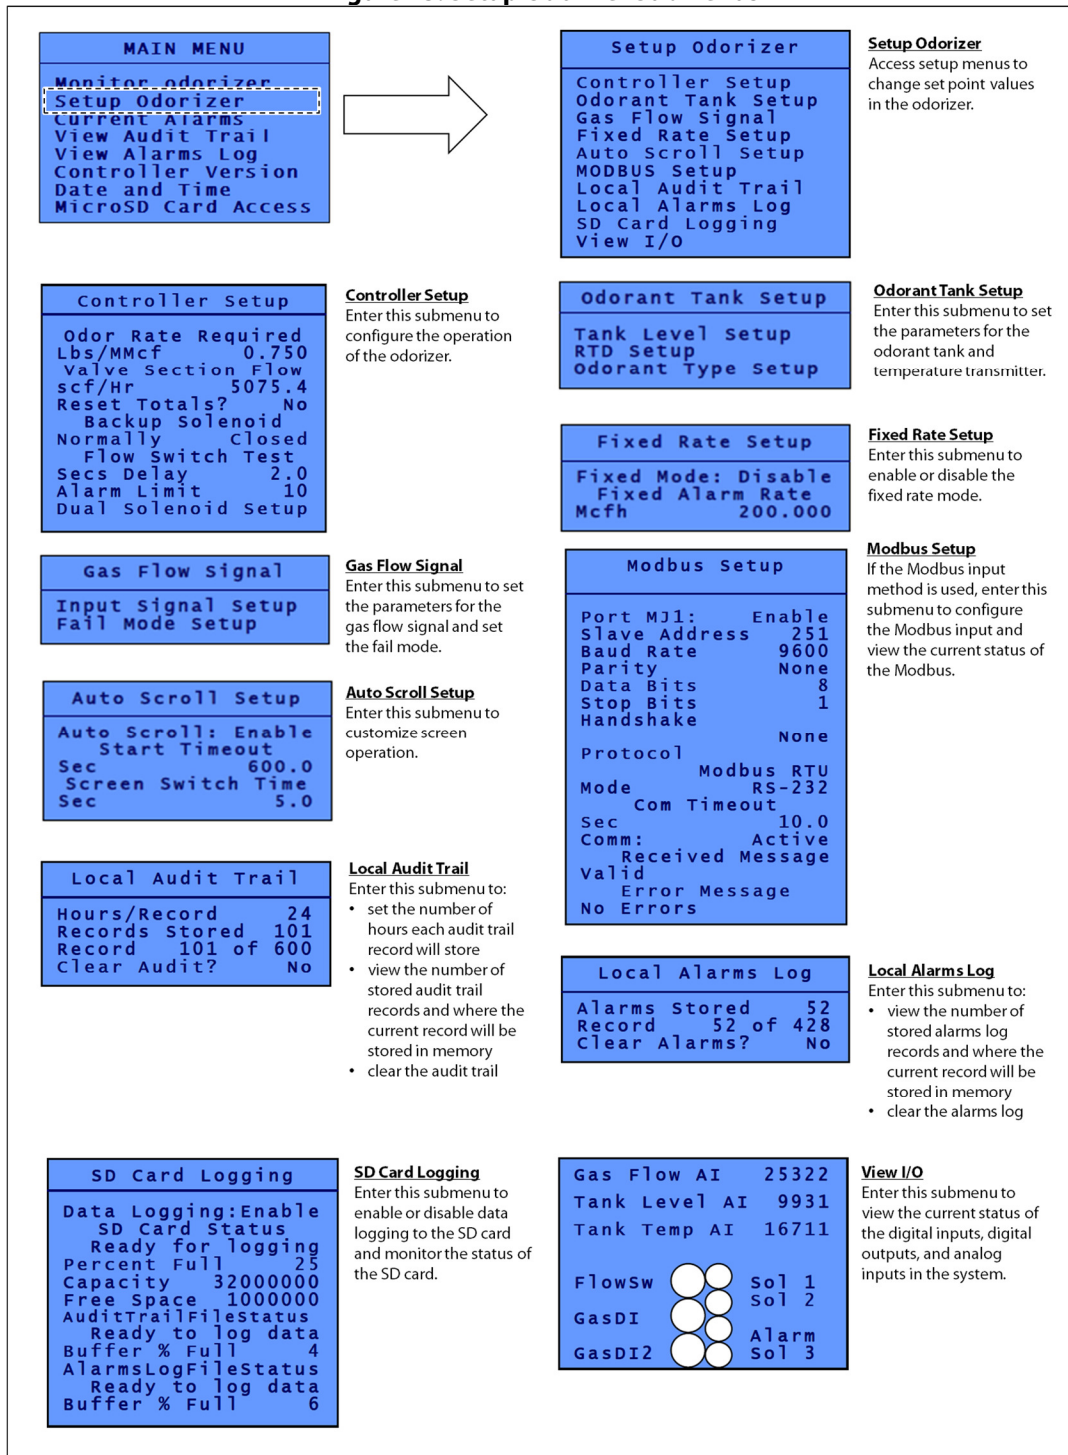

## **Changing Values on Setup Screens**

### **Numeric Values**

1. To change a numeric value, use the arrows to highlight the value to be changed, and then press ENTER (*Figure 13*). A keypad will appear on the screen.
2. Type the new numeric value using the keypad.
3. Once the new numeric value has been entered, press ENTER to save the changes.



If the new value entered is outside the range of allowable values, the value will revert back to the previous value once ENTER is pressed. The keypad will stay active, allowing another value to be entered.

### **Text Values**

4. To change a text value, press on the value to be changed. A dropdown menu will appear on the screen.
5. Scroll through the value's options using the arrows in the dropdown menu.
6. Highlight the desired text value, and then press ENTER to save the changes.




If a mistake is made while entering the new value or if the value does not need to be changed, press ESC to discard the changes.

## Controller Setup




Through the Controller Setup submenu, the user can set the general parameters for the odorizer.

**Figure 24: Controller Setup Submenu**

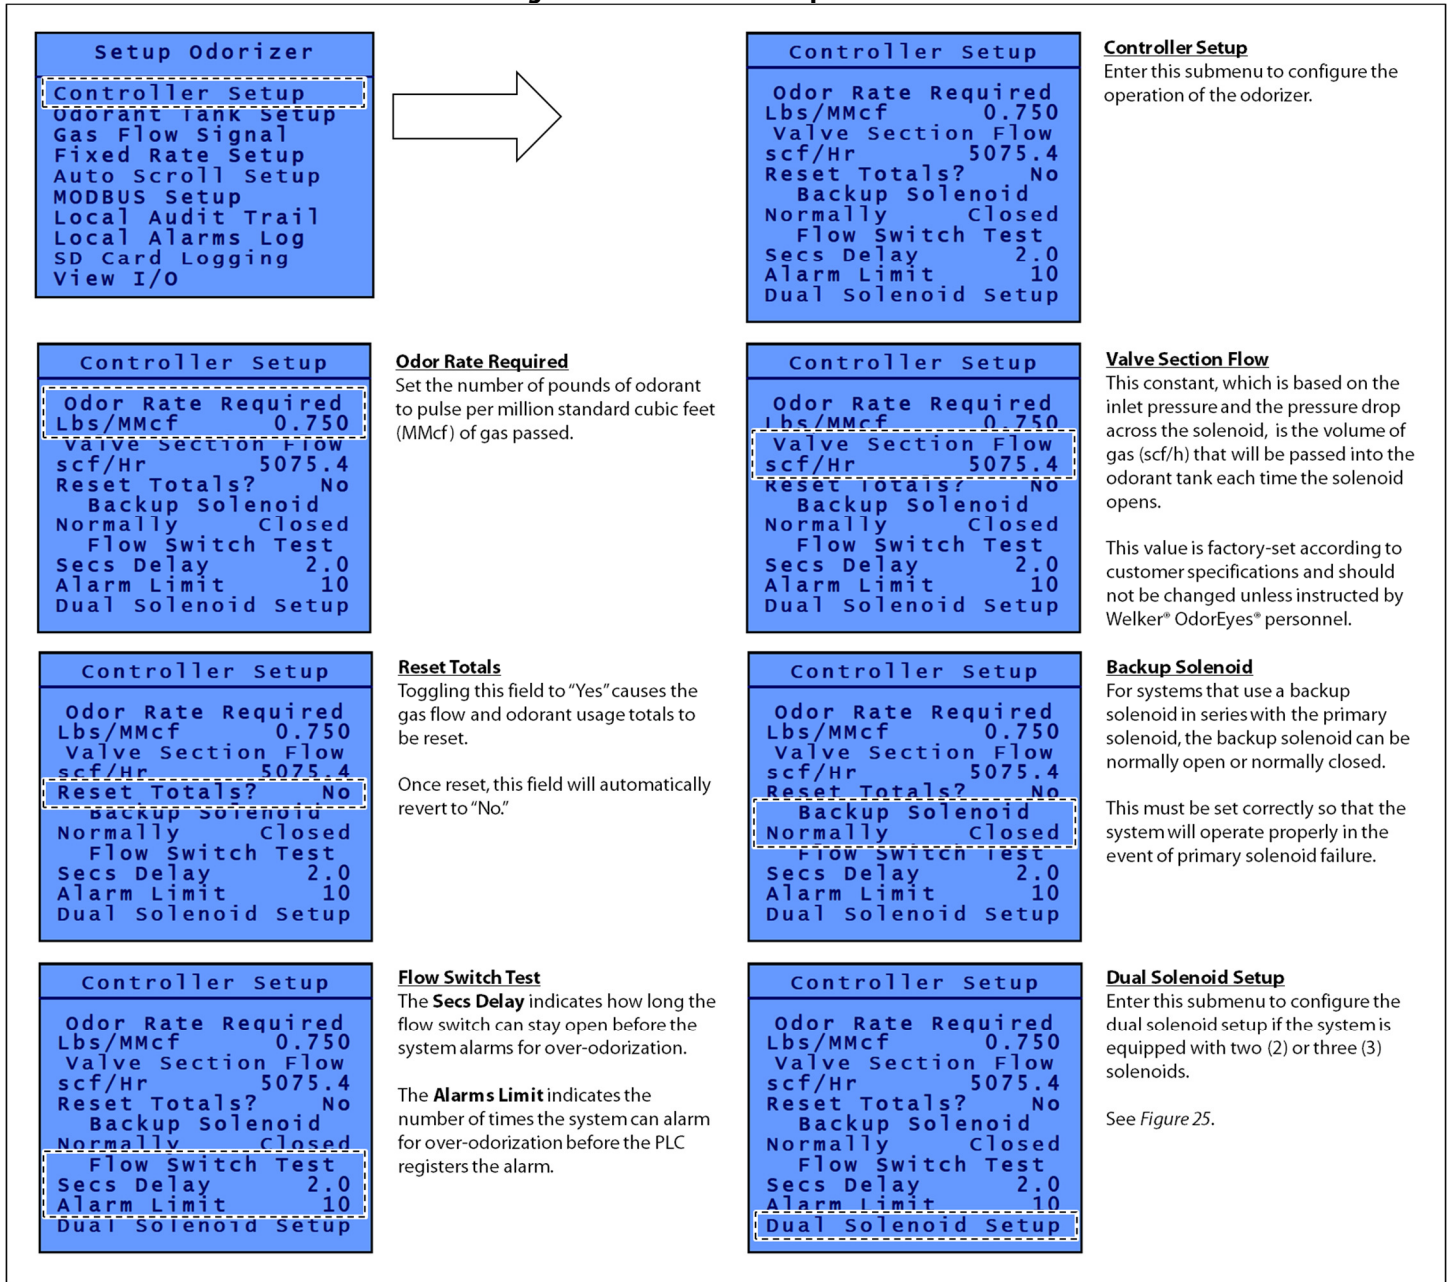

If the system status totals are used to track system performance, they should be periodically reset through the Controller Setup submenu (Figure 24). As the total values increase, they will begin to lose accuracy and will eventually stop accumulating.

**Figure 25: Dual Solenoid Setup**

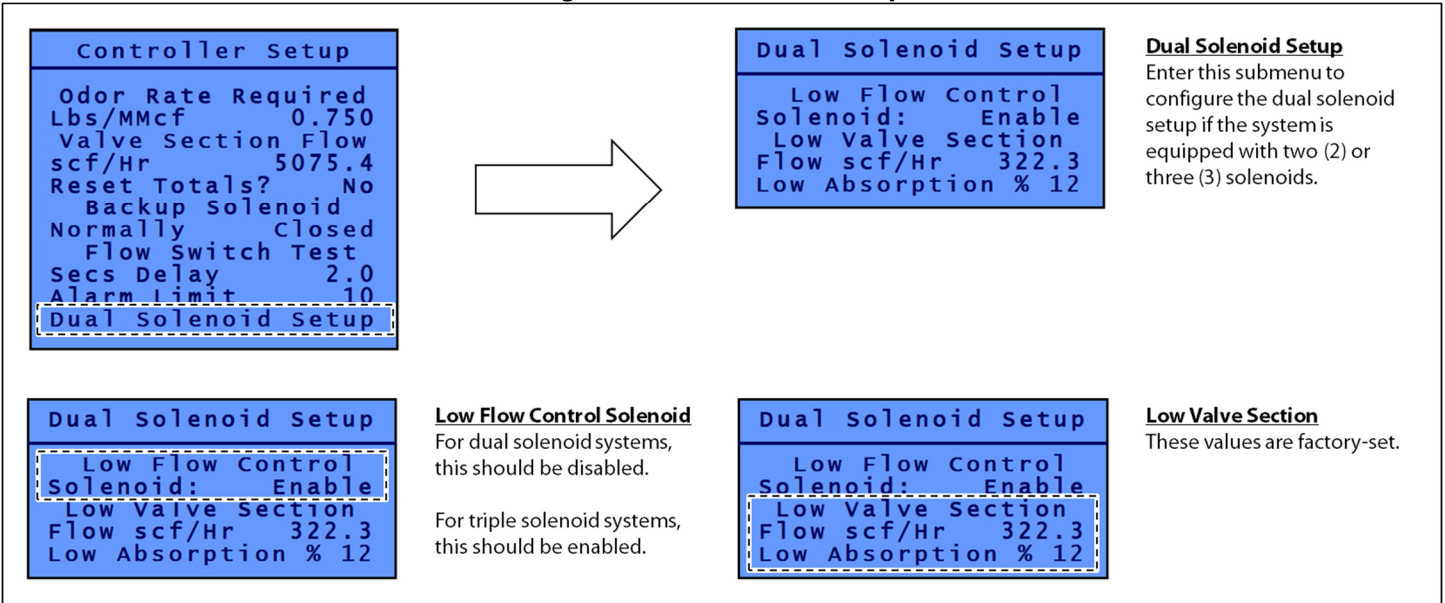

**Odorant Tank Setup**



Through the Odorant Tank Setup submenus, the user can input information for the odorant tank and temperature transmitter.

**Figure 26: Odorant Tank Setup Submenus**

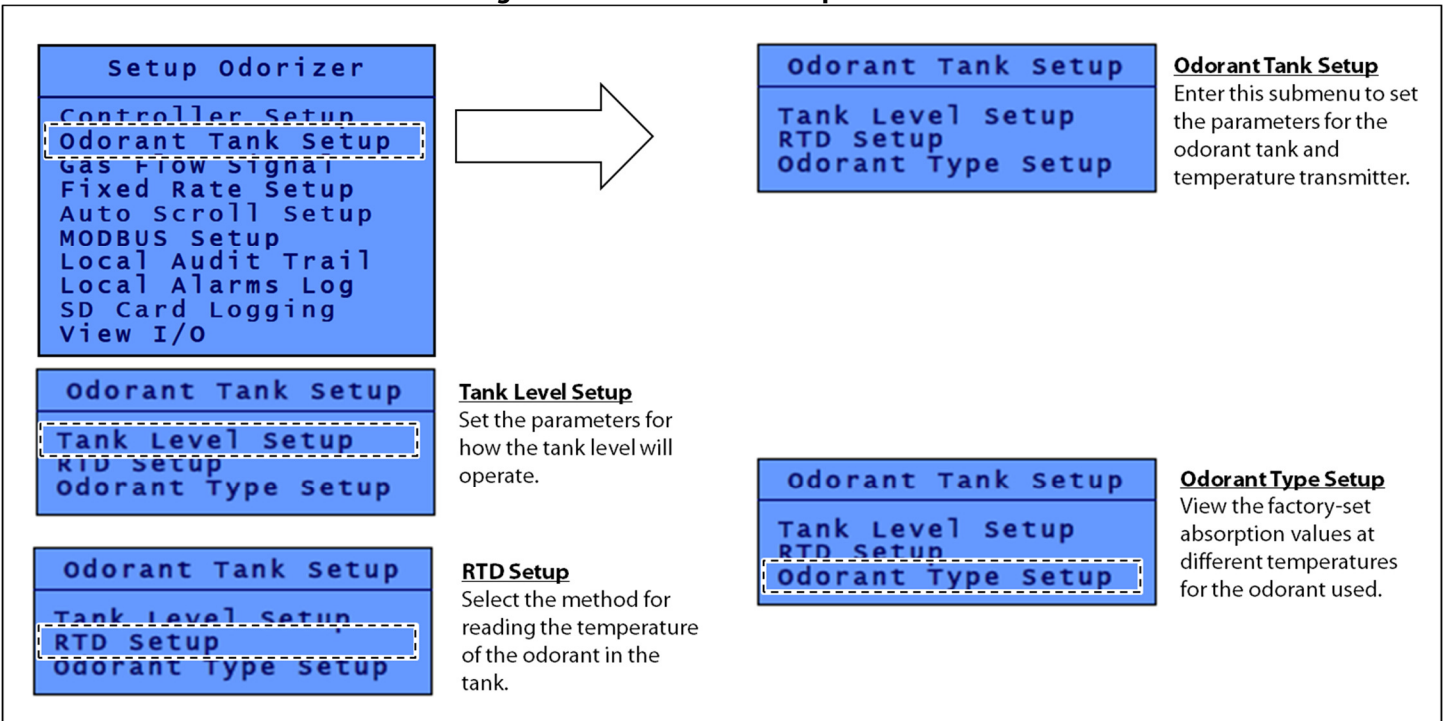


Figure 27: Tank Level Setup

**Odorant Tank Setup**

Tank Level Setup  
 KID Setup  
 Odorant Type Setup

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Tank Level Setup**

Set the parameters for how the tank level will operate.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Method**

Toggle between the two (2) methods for tracking the odorant tank level:

- odorant flow
- electronic level transmitter

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Size**

This is the volume of the tank in US gallons.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Gallons/Inch**

This value is used to convert between US gallons and inches.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Low Level Alarm**

The low level alarm set point is a percent value at which the system will trigger an alarm for low odorant level in the tank.

To clear this alarm, the tank can be filled with odorant or the set point can be lowered.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Min Level**

If the electronic level transmitter method is used, this value is the 4 mA signal.

This value is typically factory-set at 0.0 inches.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Absorption**

The absorption set point is the rate of absorption the odorizer is achieving inside the tank. This value allows the odorizer to compensate for real-world variables, such as variable gas flow and changing temperatures.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Odorant Density**

The odorant density will vary according to the odorant used.

The odorant density should be published by the odorant manufacturer in pounds/US gallons at 60 °F.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Current Level**

View the current level of the tank in US gallons.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Adjust Level**

If the odorant flow method is used, the current tank level can be manually adjusted.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Strapping**

Toggle this field to enable or disable the tank strapping table.

For horizontal odorant tanks, this field should be enabled.

For vertical odorant tanks, this field should be disabled.

**Tank Level Setup**

Method: Transmitter  
 Size (Gallons) 35  
 Gallons/Inch 0.80  
 Low Level Alarm  
 Percent 5.0  
 Min Level (") 0.0  
 Max Level (") 58.0  
 Absorption (%) 12  
 Odorant Density  
 Lbs/Gallon 6.78  
 Current Level  
 Gallons 14.4  
 Adjust Level  
 Gallons 0.0  
 Strapping: Enable  
 Strapping Table Pg1  
 Strapping Table Pg2

**Strapping Table Pg1, 2**

If strapping is enabled, view the tank depth and tank volume for each strapping point.



When using an electronic level transmitter to track the odorant tank level, the Method should be set to Transmitter. When estimating the odorant tank level based on odorant usage, the Method should be set to Odorant Flow.



The Current Level numeric value cannot be directly changed. Instead, the user must enter a value in the Adjust Level field to increase or decrease the Current Level by the specified amount.

- To decrease the Current Level, enter the volume to be subtracted from the current level as a negative number in the Adjust Level field, and then press ENTER to save the changes. The Current Level should have decreased by the amount entered, and the Adjust Level should have reverted to 0.0.
- To increase the Current Level, enter the volume to be added to the current level in the Adjust Level field, and then press ENTER to save the changes. The Current Level should have increased by the amount entered, and the Adjust Level should have reverted to 0.0.



**Figure 28: Strapping Tables**

Tank Level Setup	
Method:	Transmitter
Size (Gallons)	35
Gallons/Inch	0.80
Low Level Alarm	
Percent	5.0
Min Level (")	0.0
Max Level (")	58.0
Absorption (%)	12
Odorant Density	
Lbs/Gallon	6.78
Current Level	
Gallons	14.4
Adjust Level	
Gallons	0.0
Strapping:	Enable
Strapping Table Pg1	
Strapping Table Pg2	



Strapping Table Pg1	
Inches 1	2.00
Gallons 1	7.50
Inches 2	4.00
Gallons 2	8.25
...	
...	
Inches 10	20.00
Gallons 10	500.00

The strapping table page number.

Each page displays the tank depth in inches and the tank volume in US gallons for ten (10) strapping points.

Strapping Table Pg1	
Inches 1	2.00
Gallons 1	7.50
Inches 2	4.00
Gallons 2	8.25
...	
...	
Inches 10	20.00
Gallons 10	500.00

These rows display the tank depth in inches for ten (10) strapping points.

Strapping Table Pg1	
Inches 1	2.00
Gallons 1	7.50
Inches 2	4.00
Gallons 2	8.25
...	
...	
Inches 10	20.00
Gallons 10	500.00

These rows display the tank volume in US gallons for ten (10) strapping points.

## RTD Setup

Figure 29: RTD Setup

<pre>Odorant Tank Setup Tank Level Setup RTD Setup Odorant Type Setup</pre>		<pre>RTD Setup Method: Transmitter Min Temp (F) -30 Max Temp (F) 150 Manual Temp (F) 50</pre>	<p><b>RTD Setup</b> Select the method for reading the temperature of the odorant in the tank.</p>
<pre>RTD Setup Method: Transmitter Min Temp (F) -30 Max Temp (F) 150 Manual Temp (F) 50</pre>	<p><b>Method</b> Toggle between the two (2) methods for reading the temperature of the odorant in the tank: 1. manual entry 2. temperature transmitter</p>	<pre>RTD Setup Method: Transmitter Min Temp (F) -30 Max Temp (F) 150 Manual Temp (F) 50</pre>	<p><b>Min Temp</b> If the temperature transmitter method is used, this value is the 4 mA signal.</p>
<pre>RTD Setup Method: Transmitter Min Temp (F) -30 Max Temp (F) 150 Manual Temp (F) 50</pre>	<p><b>Max Temp</b> If the temperature transmitter method is used, this value is the 20 mA signal.</p>	<pre>RTD Setup Method: Transmitter Min Temp (F) -30 Max Temp (F) 150 Manual Temp (F) 50</pre>	<p><b>Manual Temp</b> Manually enter the temperature of the odorant in the tank in degrees Fahrenheit.  The temperature should be manually entered even if the temperature transmitter method is used, as the system will automatically switch over to manual entry in the event of signal loss from the transmitter.</p>



When using a temperature transmitter to track the temperature in the odorant tank, the Method should be set to Transmitter. When there is no device tracking the temperature in the odorant tank, the Method should be set to Manual Entry.



Setting an accurate manual temperature is necessary, even when using a temperature transmitter. The temperature of the odorant supply tank is key to system operation; correct odorization is not possible without this value.

## Odorant Type Setup

Figure 30: Odorant Type Setup

<pre>Odorant Tank Setup Tank Level Setup RTD Setup Odorant Type Setup</pre>		<pre>Odorant Type Setup -20 Degrees F 1310 -10 Degrees F 1800 : : 120 Degrees F 46500</pre>	<p><b>Odorant Type Setup</b> View the factory-set absorption values at different temperatures for the odorant used.</p>
<pre>Odorant Type Setup -20 Degrees F 1310 -10 Degrees F 1800 : : 120 Degrees F 46500</pre>	<p>This column displays the temperature values in degrees Fahrenheit. The temperatures range from -20 °F to 120 °F and increase by increments of 10 °F.</p>	<pre>Odorant Type Setup -20 Degrees F 1310 -10 Degrees F 1800 : : 120 Degrees F 46500</pre>	<p>This column displays the absorption value associated with each temperature.  These values are factory-set based on customer specifications.</p>




If the type of odorant used is changed, please contact Welker® OdorEyes® personnel for new absorption values and/or pressure regulator setting.

## Gas Flow Signal



Through the Gas Flow Signal submenus, the user can set up the parameters of the odorant gas flow input signal.

Figure 31: Gas Flow Signal Submenus

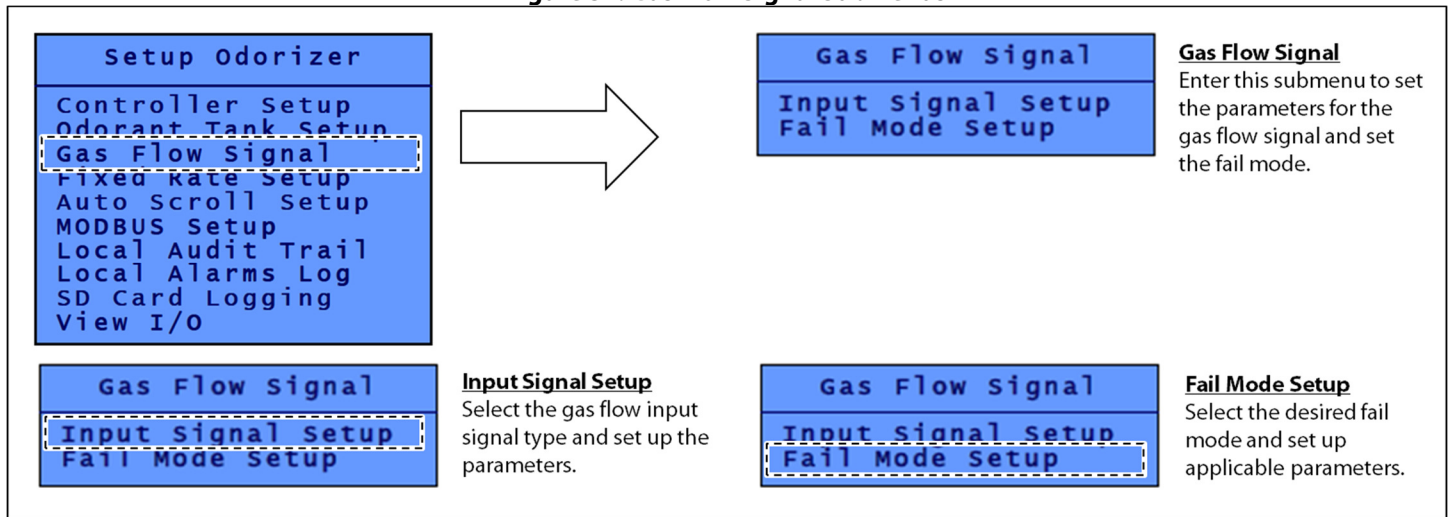

**Figure 32: Gas Flow Signal – Input Signal Setup**

**Gas Flow Signal**

Input signal Setup

Fail Mode Setup

➔

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Input Signal Setup**  
Select the gas flow input signal type and set up the parameters.

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Method**  
Toggle between the two (2) input signal types:

1. analog input: used if there is a 4–20 mA signal representative of the pipeline gas flow
2. pulse input: used if there is a DC 12V or DC 24V pulse input signal representative of the pipeline gas flow

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Min Mcf/Hr**  
If analog input is used, this value is the 4 mA signal.

If pulse input is used, this value must be manually set so the odorizer can approximate the current gas flow rate based on the pulse inputs.

In most cases, this value comes factory-set to zero (0) Mcf/h.

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Max Mcf/Hr**  
If analog input is used, this value is the 20 mA signal.

If pulse input is used, this value must be manually set so the odorizer can approximate the current gas flow rate based on the pulse inputs.

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Zero Gas Flow Cutoff**  
This value is only active if the analog input method is used.

Any value below this gas flow cutoff value (in milliamps) will be treated as zero gas flow (0 Mcf/h).

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Pulse Input**  
This value is the total cubic feet of gas that each pulse input to the controller represents.

This value is used for the pulse input method only.

The system automatically calculates how many gas flow input signal pulses it will accept before opening the solenoid for odorization.

**Input signal Setup**

Method: Analog Input

Min Mcf/Hr 0.000

Max Mcf/Hr 2000.000

Zero Gas Flow

Cutoff (mA) 4.1

Pulse Input

scf/pulse 100

Modbus Flow Rate

Mcf/Hr 1750.000

**Modbus Flow Rate**  
If the Modbus input method is used, this is the value the Modbus is downloading for the flow rate (Mcf/h).

This value can be changed here for testing purposes.




If the gas flow signal will be analog, the analog signal must be 4–20 mA powered by the user.  
If the gas flow signal will be a pulse, the pulse will be a digital pulse powered by the controller.



If the pulse input method is selected, the Pulse Input Cutoff must also be set (Figure 33).

**Figure 33: Gas Flow Signal – Fail Mode Setup**

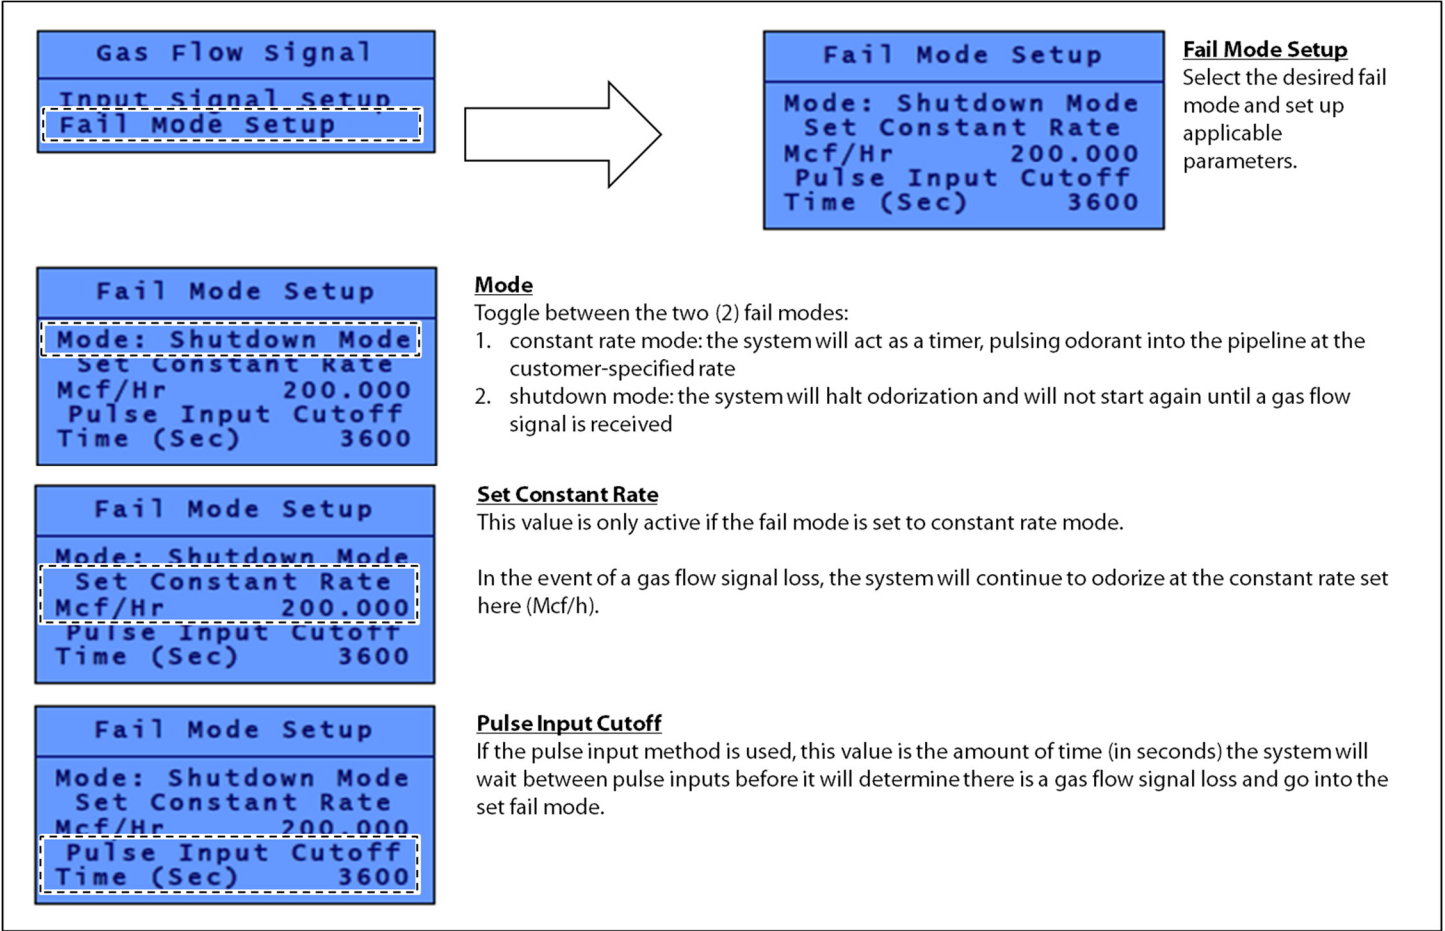


Setting the Fail Mode to Shutdown will halt odorization until the alarm is cleared.  
Setting the Fail Mode to Constant Rate will allow odorization to continue at the specified rate.



If the gas flow value does not change during the Pulse Input Cutoff time, the system will alarm for loss of flow and will enter the specified Fail Mode. The alarm will clear on the next pulse input or change in Modbus gas flow, and the system will resume normal operation.

## Fixed Rate Setup

Figure 34: Fixed Rate Setup

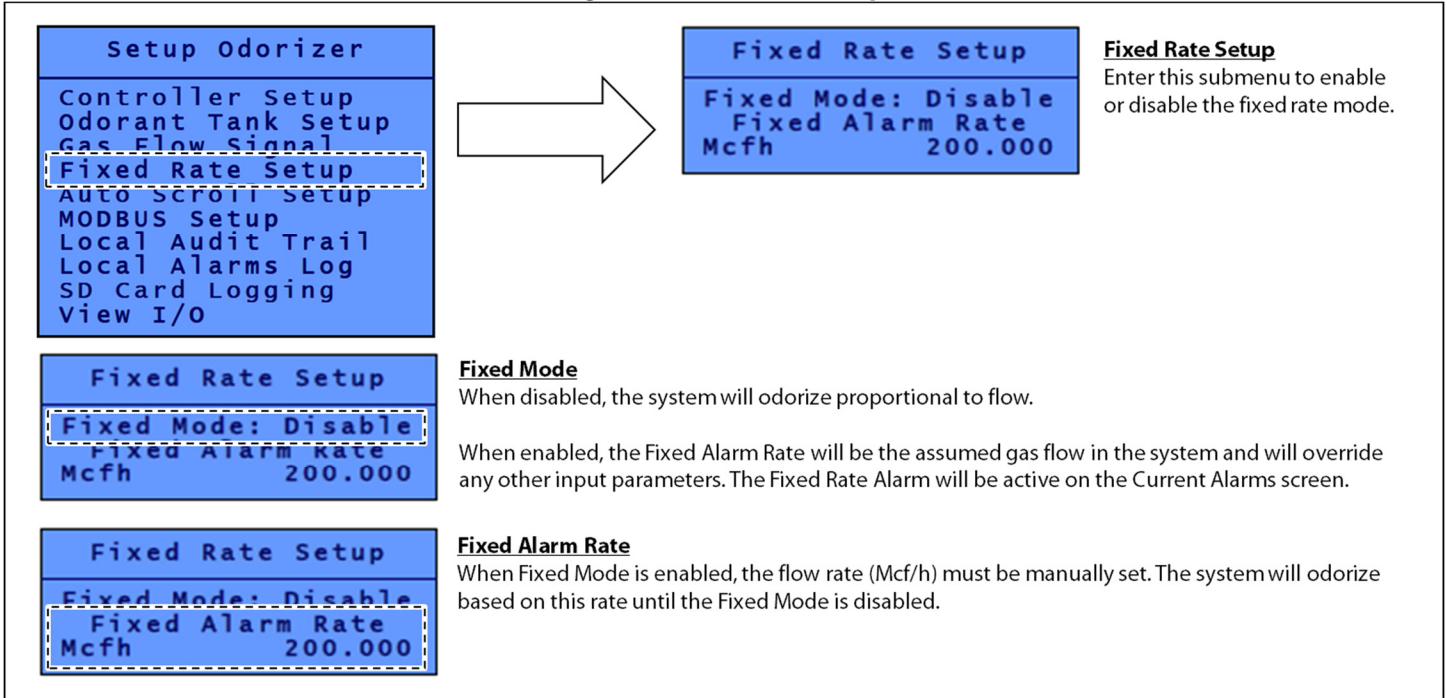

## Auto Scroll Setup

Figure 35: Auto Scroll Setup


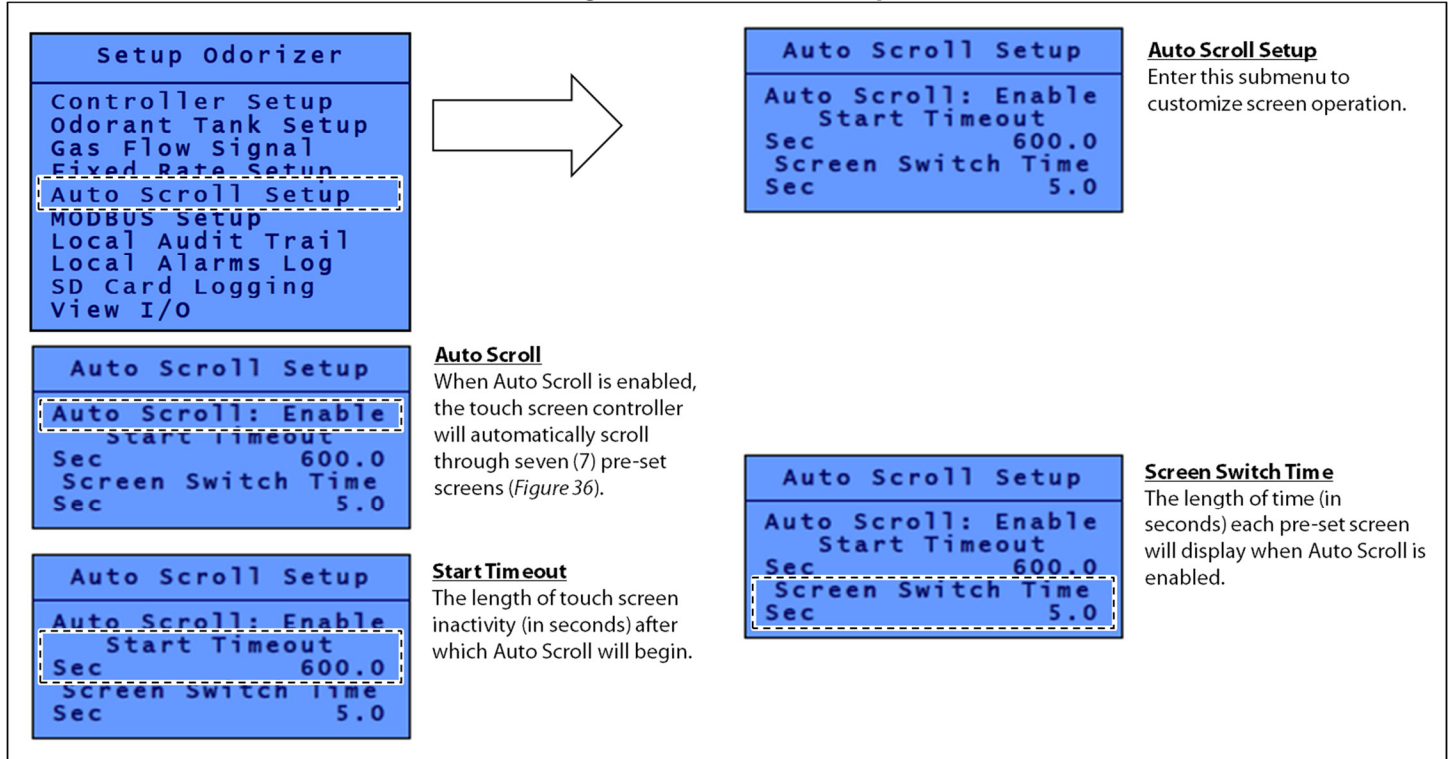


Figure 36: Auto Scroll Pre-Set Screens





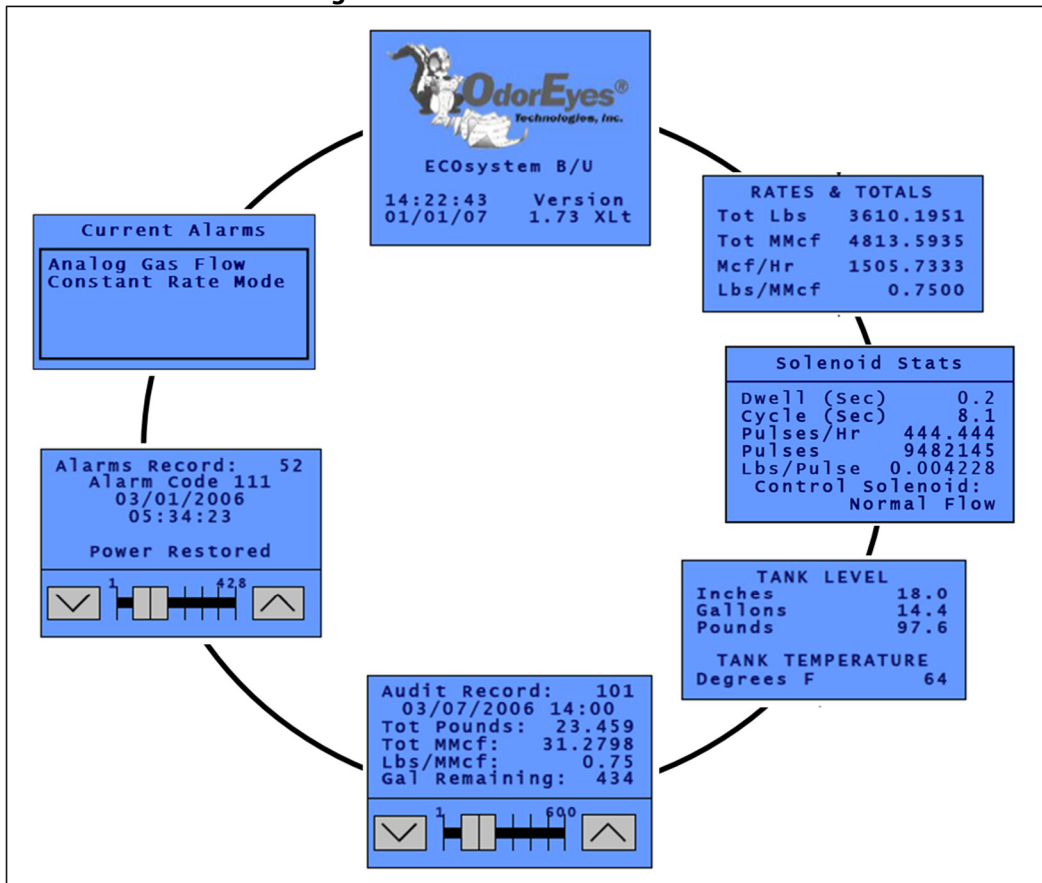


## Audit Trail and Alarms Log Setup




Through the Local Audit Trail and Local Alarms Log submenus, the user can set up and reset the data logs stored locally.

**Figure 38: Audit Trail and Alarms Log Setup**

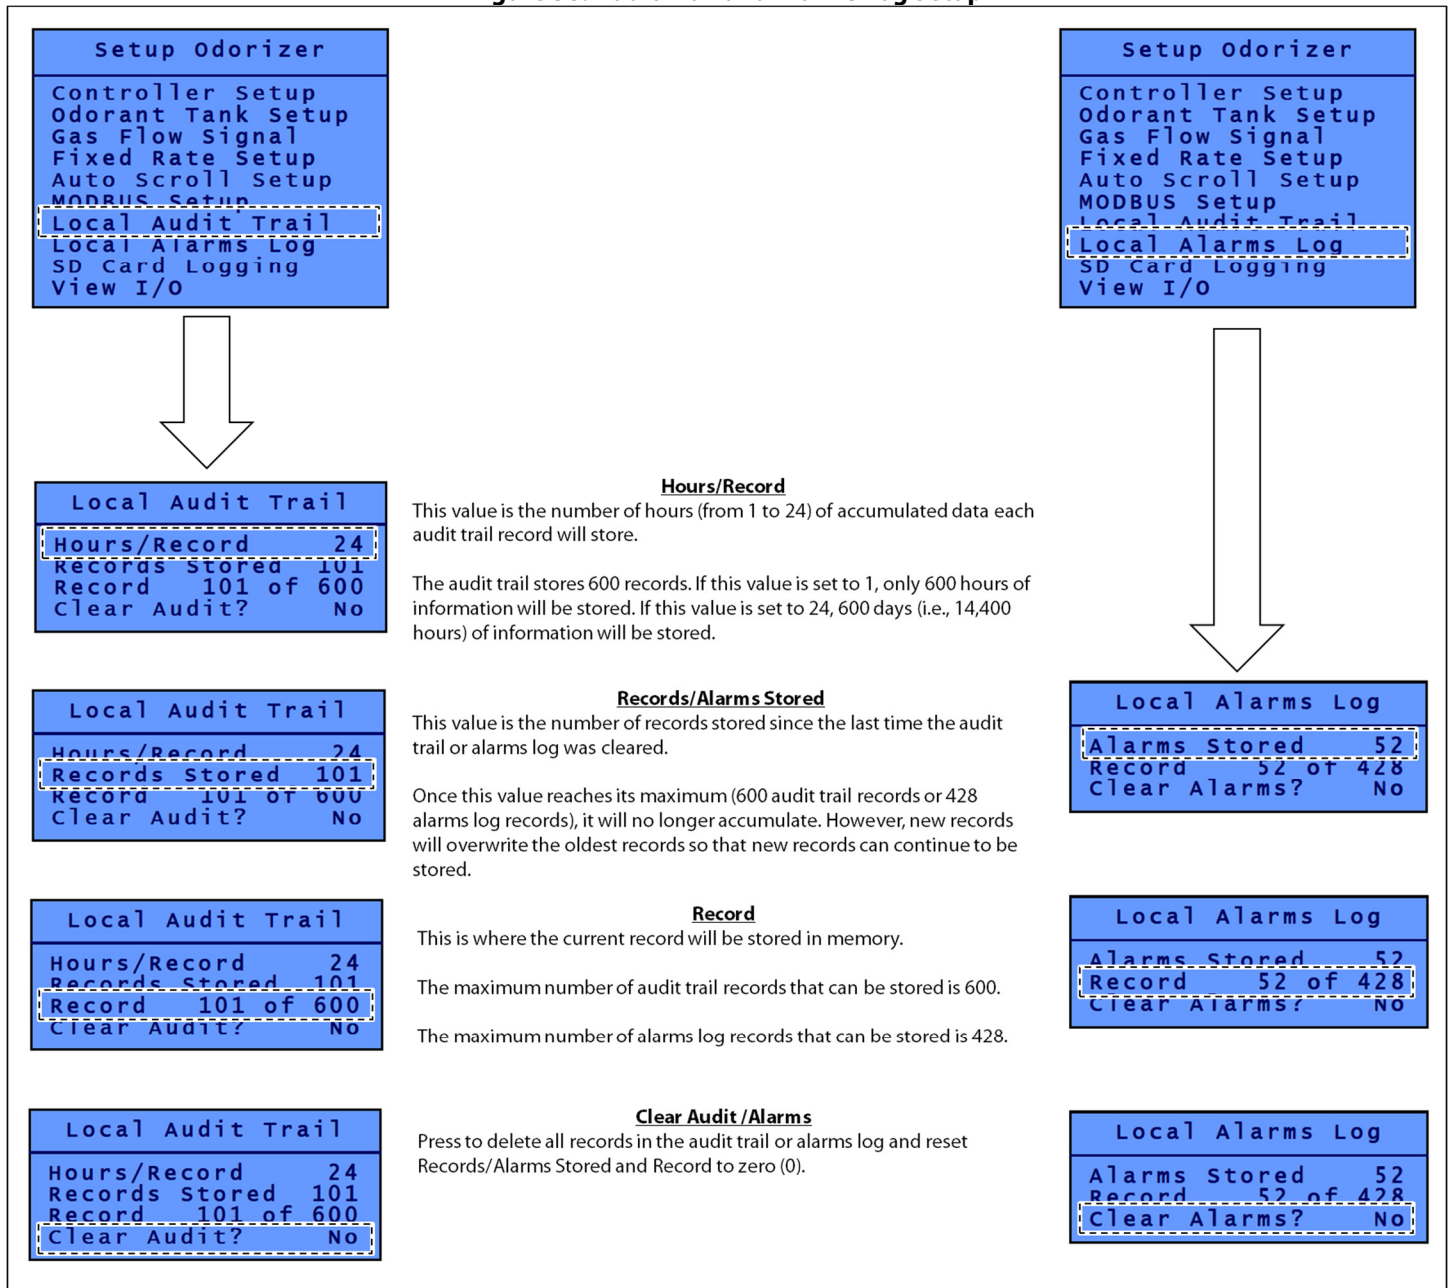

## SD Card Logging

Figure 39: SD Card Logging

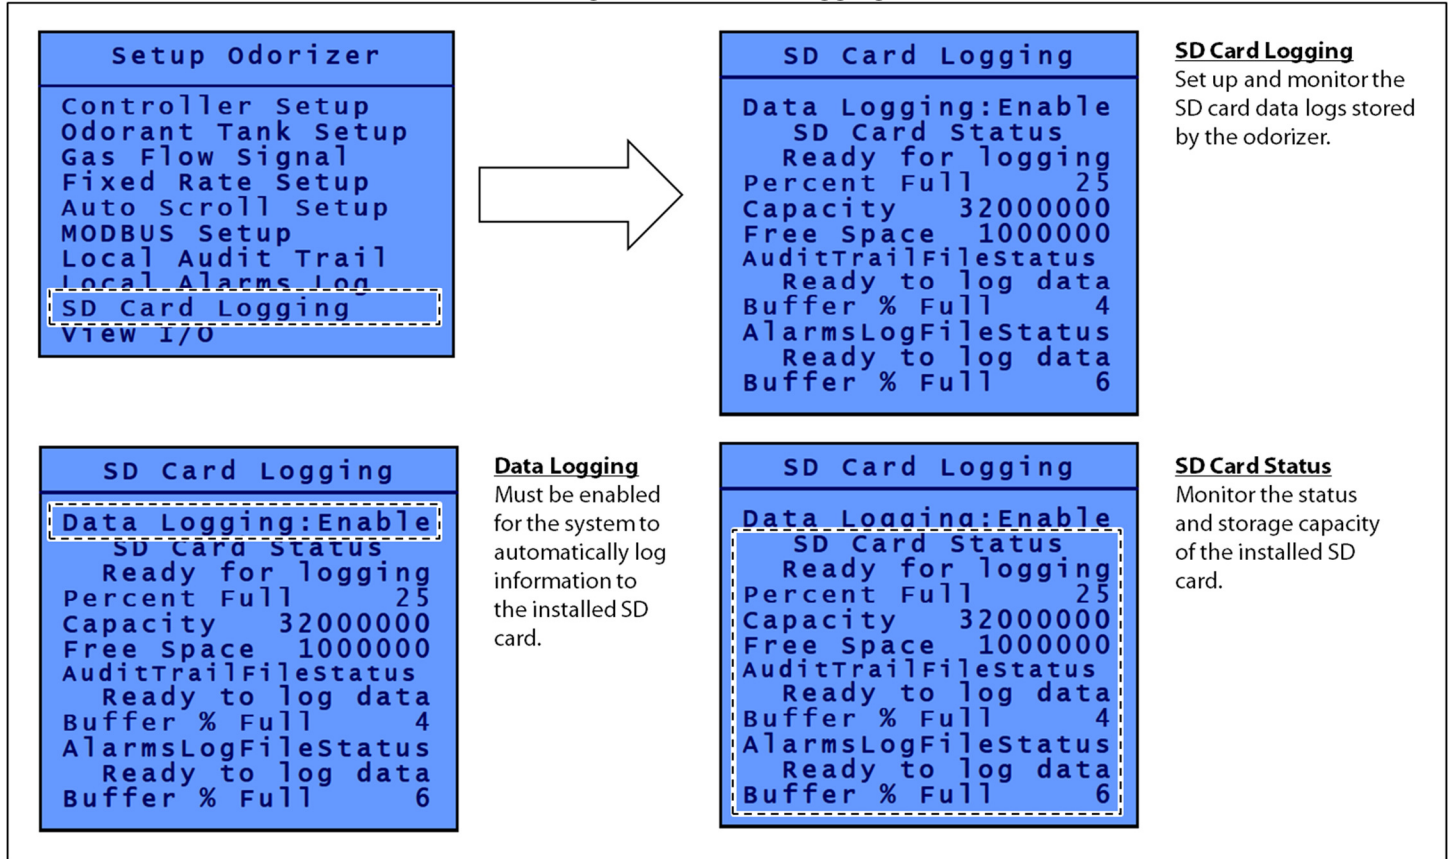

**View I/O**



The View I/O submenu provides the user with an overview of the current status of digital inputs, digital outputs, and analog inputs in the system.

**Figure 40: View I/O, 1 of 2**



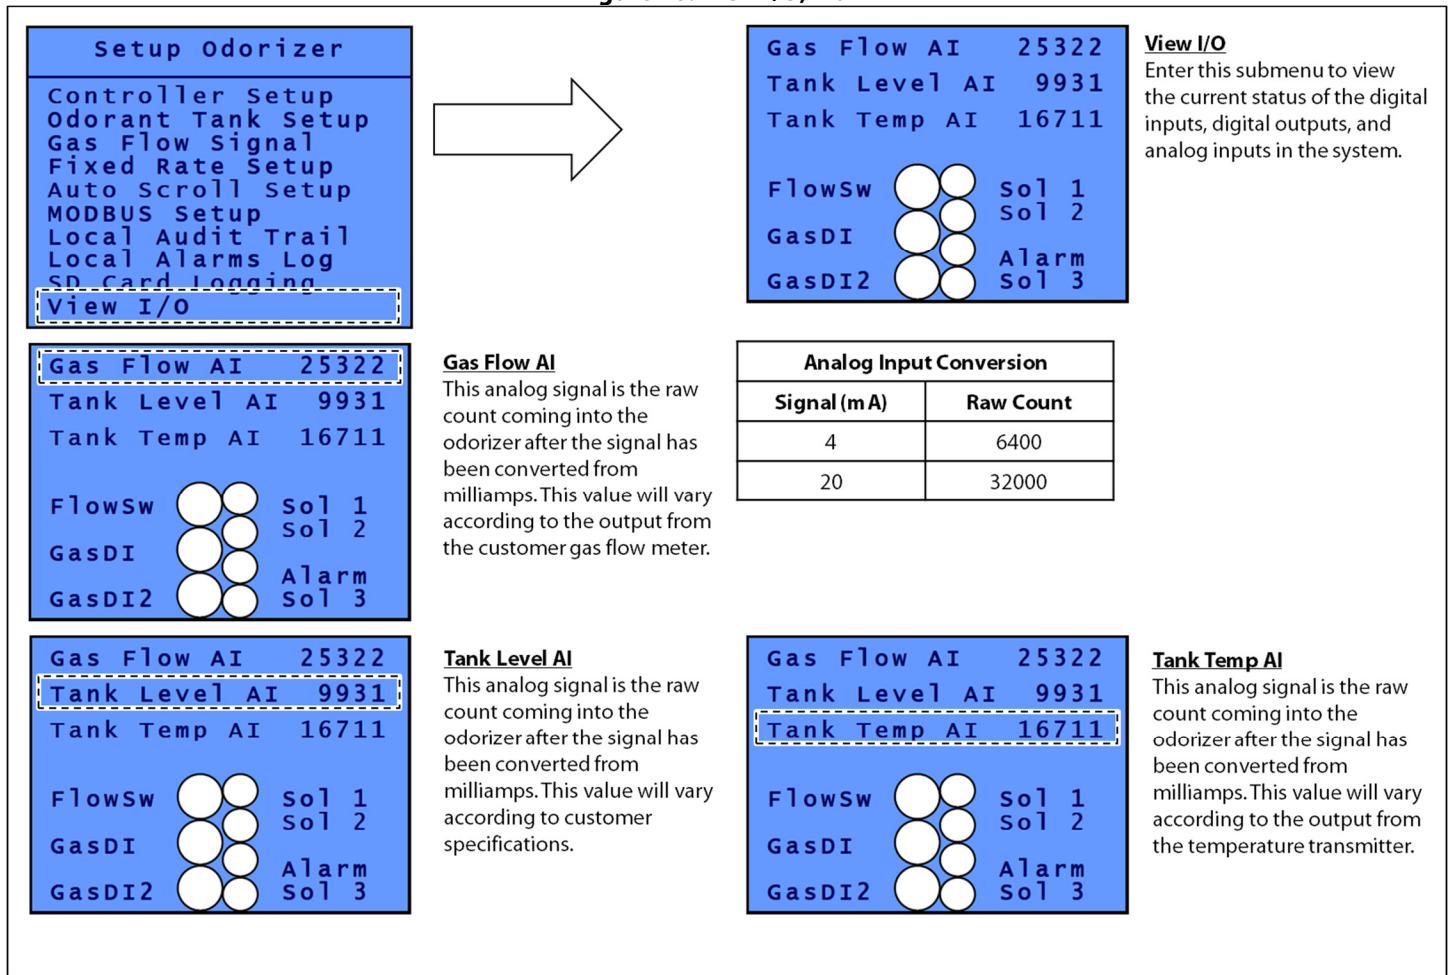


Figure 41: View I/O, 2 of 2

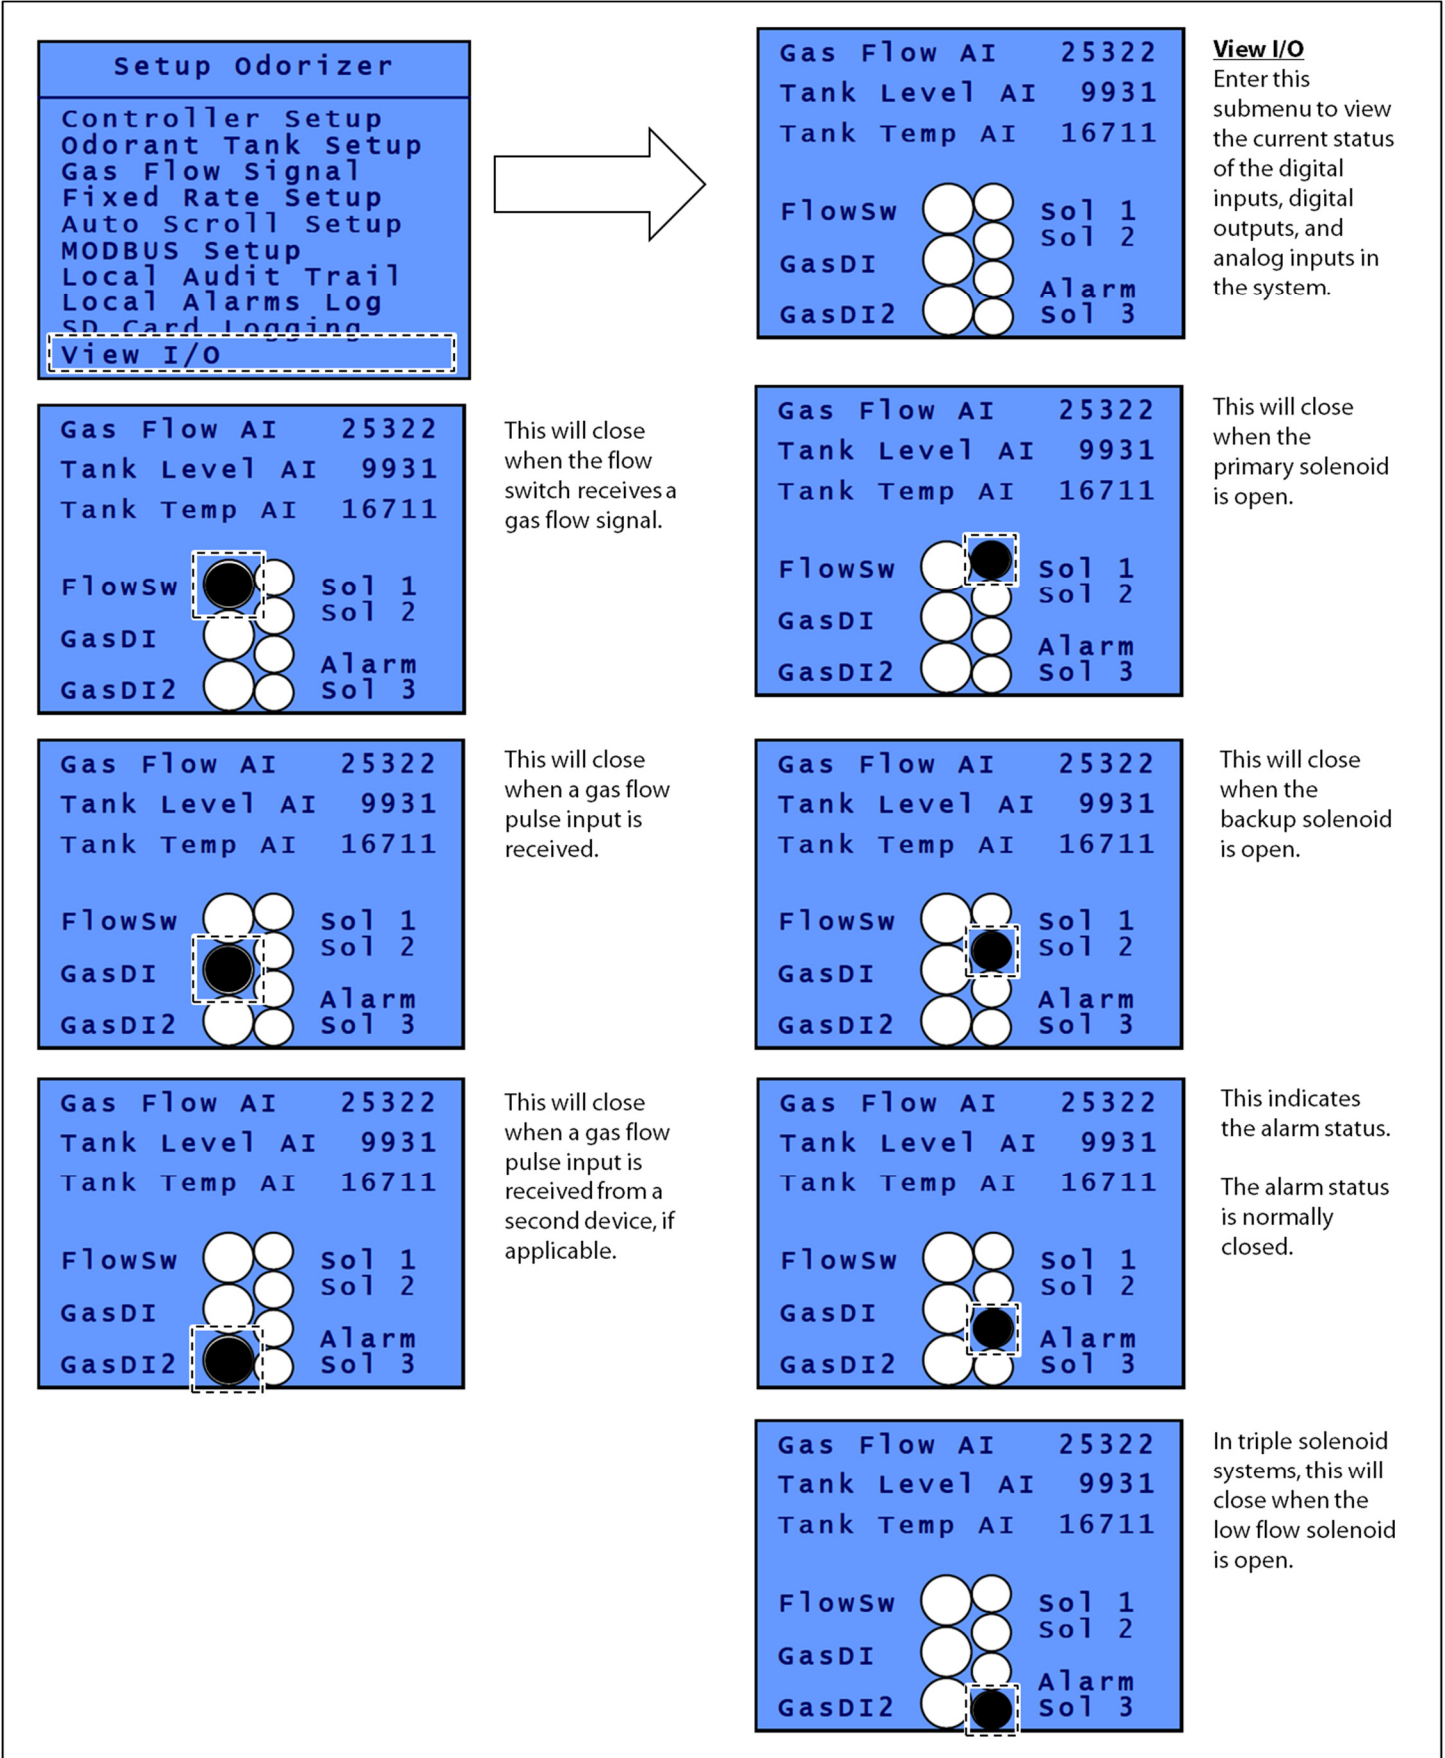

## Date and Time

Figure 42: Date and Time

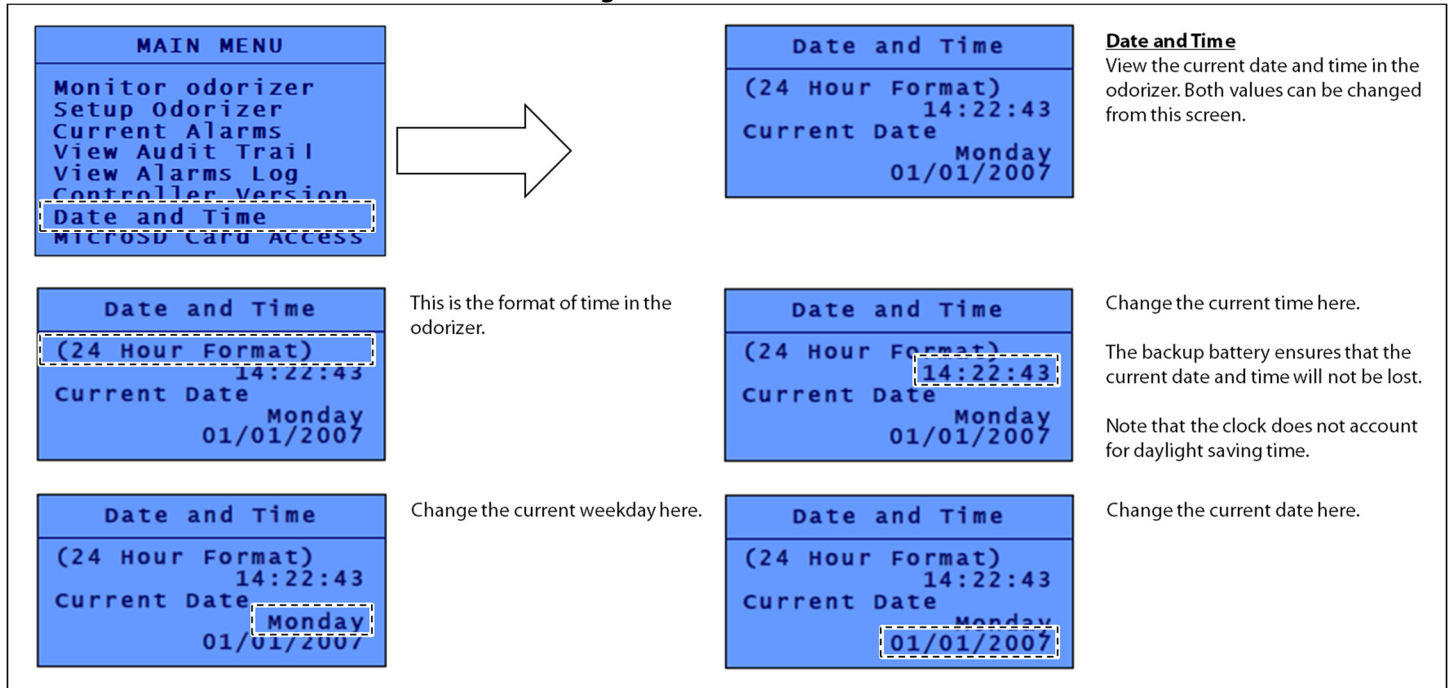

## SECTION 4: MAINTENANCE

### 4.1 Before You Begin

1. Refer to *Appendix B, Maintenance Schedule*, for the itemized Welker recommended maintenance schedule for the ECOsystem™.
2. Prior to maintenance or disassembly of the unit, it is advisable to have a repair kit available for repairs of the system in case of unexpected wear or faulty seals.



New seals supplied in spare parts kits should be lightly lubricated before being installed to ease the installation of the seals and reduce the risk of damage when positioning them on parts. Wipe excess lubricant from the seals, as it may adversely affect analytical instrument results.



For sample-exposed seals, Welker recommends non-hydrocarbon-based lubricants, such as Krytox®. For non-sample-exposed seals, Welker recommends either non-hydrocarbon-based lubricants or silicone-based lubricants, such as Molykote® 111.



After the seals are installed, the outer diameter of shafts and inner diameter of cylinders may be lubricated to allow smooth transition of parts.

3. All maintenance and cleaning of the unit should be performed on a smooth, clean surface.

### 4.2 Maintenance

1. During operation, monitor the system for leaks. If leaks are present, halt operation and repair as necessary.
2. Occasionally, a system component may need to be repaired or replaced for manufacturer recommended maintenance. To perform maintenance on components:
  - a. Turn OFF all electrical power to the system.
  - b. Depressurize the system and close all valves.



Prior to closing odorized gas outlet valves K1 and K2 and/or the pipeline isolation valve, the ECOsystem™ must be powered down. This is to prevent the odorant supply tank from building pressure.

- c. Disconnect the tubing and remove individual system components for maintenance.
- d. For complete and proper maintenance on individual system components, refer to their respective *Installation, Operation, and Maintenance (IOM) Manual*. A list of component *Installation, Operation, and Maintenance (IOM) Manuals* is available in *Appendix A, Referenced or Attached Documents*, in this manual.
- e. After performing necessary maintenance on system components, reconnect all instrument tubing.
- f. Reinstall the system according to the instructions in *Section 2.2, Installation*, and *Section 2.3, Start-Up Procedures*.

## APPENDIX A: REFERENCED OR ATTACHED DOCUMENTS

Welker *Installation, Operation, and Maintenance (IOM) Manuals* suggested for use with this unit:

- IOM-025: Welker IR-1, IR-2, IR-4, and IR-6 Instrument Regulators
- IOM-033: Welker RV-1, RV-2, RV-2CP, and RV-3 Relief Valves
- IOM-105: Welker NV-1 and NV-2 Instrument Valves
- IOM-169: Welker F-5 Filter Dryer

Other *Installation, Operation, and Maintenance (IOM) Manuals* suggested for use with this unit:

- ABB Inc. K-TEK Products AT200 Magnetostrictive Level Transmitter (Welker IOM-V011)
- ASCO, L.P. 0.55 W Low Power Solenoid Valves Low Power Series (Welker IOM-V267)
- ASCO, L.P. 1.4 W Low Power Solenoid Valves Low Power Series (Welker IOM-V266)
- ASCO, L.P. General Service Solenoid Valves Series 8314 (Welker IOM-V121)
- ASCO, L.P. High Pressure Solenoid Valves Series 8223 (Welker IOM-V103)
- CCI Thermal Technologies Inc. Cata-Dyne™ Explosion-Proof Gas Catalytic Heaters WX Series (Welker IOM-V030)
- Emerson Process Management Regulator Technologies, Inc. Fisher™ 1301 Series High-Pressure Regulators Types 1301F and 1301G (Welker IOM-V107)
- Gems Sensors Inc. Piston-Type Flow Switches Series FS-925/926 & FS-927/930 (Welker IOM-V029)
- GE Oil & Gas Mooney Series 20/20S/20H/20HS Pilot Regulators (Welker IOM-V101)
- Horner APG, LLC XLe/XLt OCS (Welker IOM-V224)
- Inline Industries, Inc. 201F Ball Valve (Welker IOM-V222)
- INTERTEC Instrumentation Ltd. CP MULTITHERM C Electric Heater (Welker IOM-V104)
- INTERTEC Instrumentation Ltd. TS Thermostat (Welker IOM-V105)
- MTS Systems Corporation Level Plus® Liquid-Level Sensors With Temposonics® Technology M-Series Model MR Analog Transmitter (Welker IOM-V036)
- Power-Sonic Corporation PS-1270 12 Volt 7.0 AH Rechargeable Sealed Lead Acid Battery (Welker IOM-V223)
- PR electronics 5333D 2-Wire Programmable Transmitter (Welker IOM-V270)
- PR electronics PRetop 5331B 2-Wire Programmable Transmitter (Welker IOM-V269)
- Quest-Tec Solutions Magne-Trac™ Level Indicators (Welker IOM-V367)
- Saginaw Control & Engineering EL Enclosure SCE-30EL3012LP (Welker IOM-V265)
- Solutions With Innovation L505 Visual Level Indicator Dip-Tape Visual Level Indicator (Welker IOM-V037)
- Swagelok Company Check Valves C, CA, CH, CP, and CPA Series (Welker IOM-V076)
- Swagelok Company One-Piece Instrumentation Ball Valves 40G Series and 40 Series (Welker IOM-V085)
- Swagelok Company Plug Valves P4T and P6T Series (Welker IOM-V102)
- Swagelok Company Proportional Relief Valves R Series (Welker IOM-V086)
- WIKA Instrument Corporation Bourdon Tube Pressure Gauges Type 232.53 and Type 233.53 (Welker IOM-V171)

Welker drawings and schematics suggested for use with this unit:

- System Drawing: OE153VS (Single Solenoid Valve Section,  $\frac{3}{8}$ " Tubing)
- System Drawing: OE180VS.1 (Dual Solenoid Valve Section,  $\frac{3}{8}$ " Tubing)
- System Drawing: OE181VS (Dual Solenoid Valve Section,  $\frac{1}{4}$ " Tubing)
- System Drawing: OE181VS.3E (Dual Solenoid Valve Section With Optional Heater,  $\frac{1}{4}$ " Tubing)
- System Drawing: OE183VS.1E (Dual Solenoid Valve Section With Optional Heater,  $\frac{3}{8}$ " Tubing)
- System Drawing: OE190VS (Single Solenoid Valve Section,  $\frac{1}{4}$ " Tubing)
- System Drawing: OE220VS.1E (Triple Solenoid Valve Section,  $\frac{1}{4}$ " and  $\frac{3}{8}$ " Tubing)

**APPENDIX B: MAINTENANCE SCHEDULE**



Welker recommends keeping high-wear parts on hand and replacing these parts immediately when worn or damaged.



Refer to the *Installation, Operation, and Maintenance (IOM) Manual* for each component for maintenance instructions.

**Table B1: ECOsystem™ Maintenance Schedule**

Action	Weekly	Every 12 Months	As Necessary
<b>If applicable, confirm proper functioning of the heater.</b>	X		
<b>Open F-5 drain valve G to allow moisture to drain from the filter.</b>	X		
<b>Verify the pneumatic supply pressure.</b>		X	
<b>Rebuild the F-5 using a Welker repair kit.</b>		X	
• <b>Replace the O-rings and filter cartridge.</b>			
<b>View the controller’s current alarms.</b>			X
<b>Inspect the tubing, valves, and fittings on the system for leaks.</b>			X
<b>Replace the controller battery.</b>			X
<b>Maintain the flow switch.</b>			X
<b>Maintain the regulator.</b>			X
<b>Maintain the relief valve.</b>			X
<b>Maintain the solenoid(s).</b>			X



